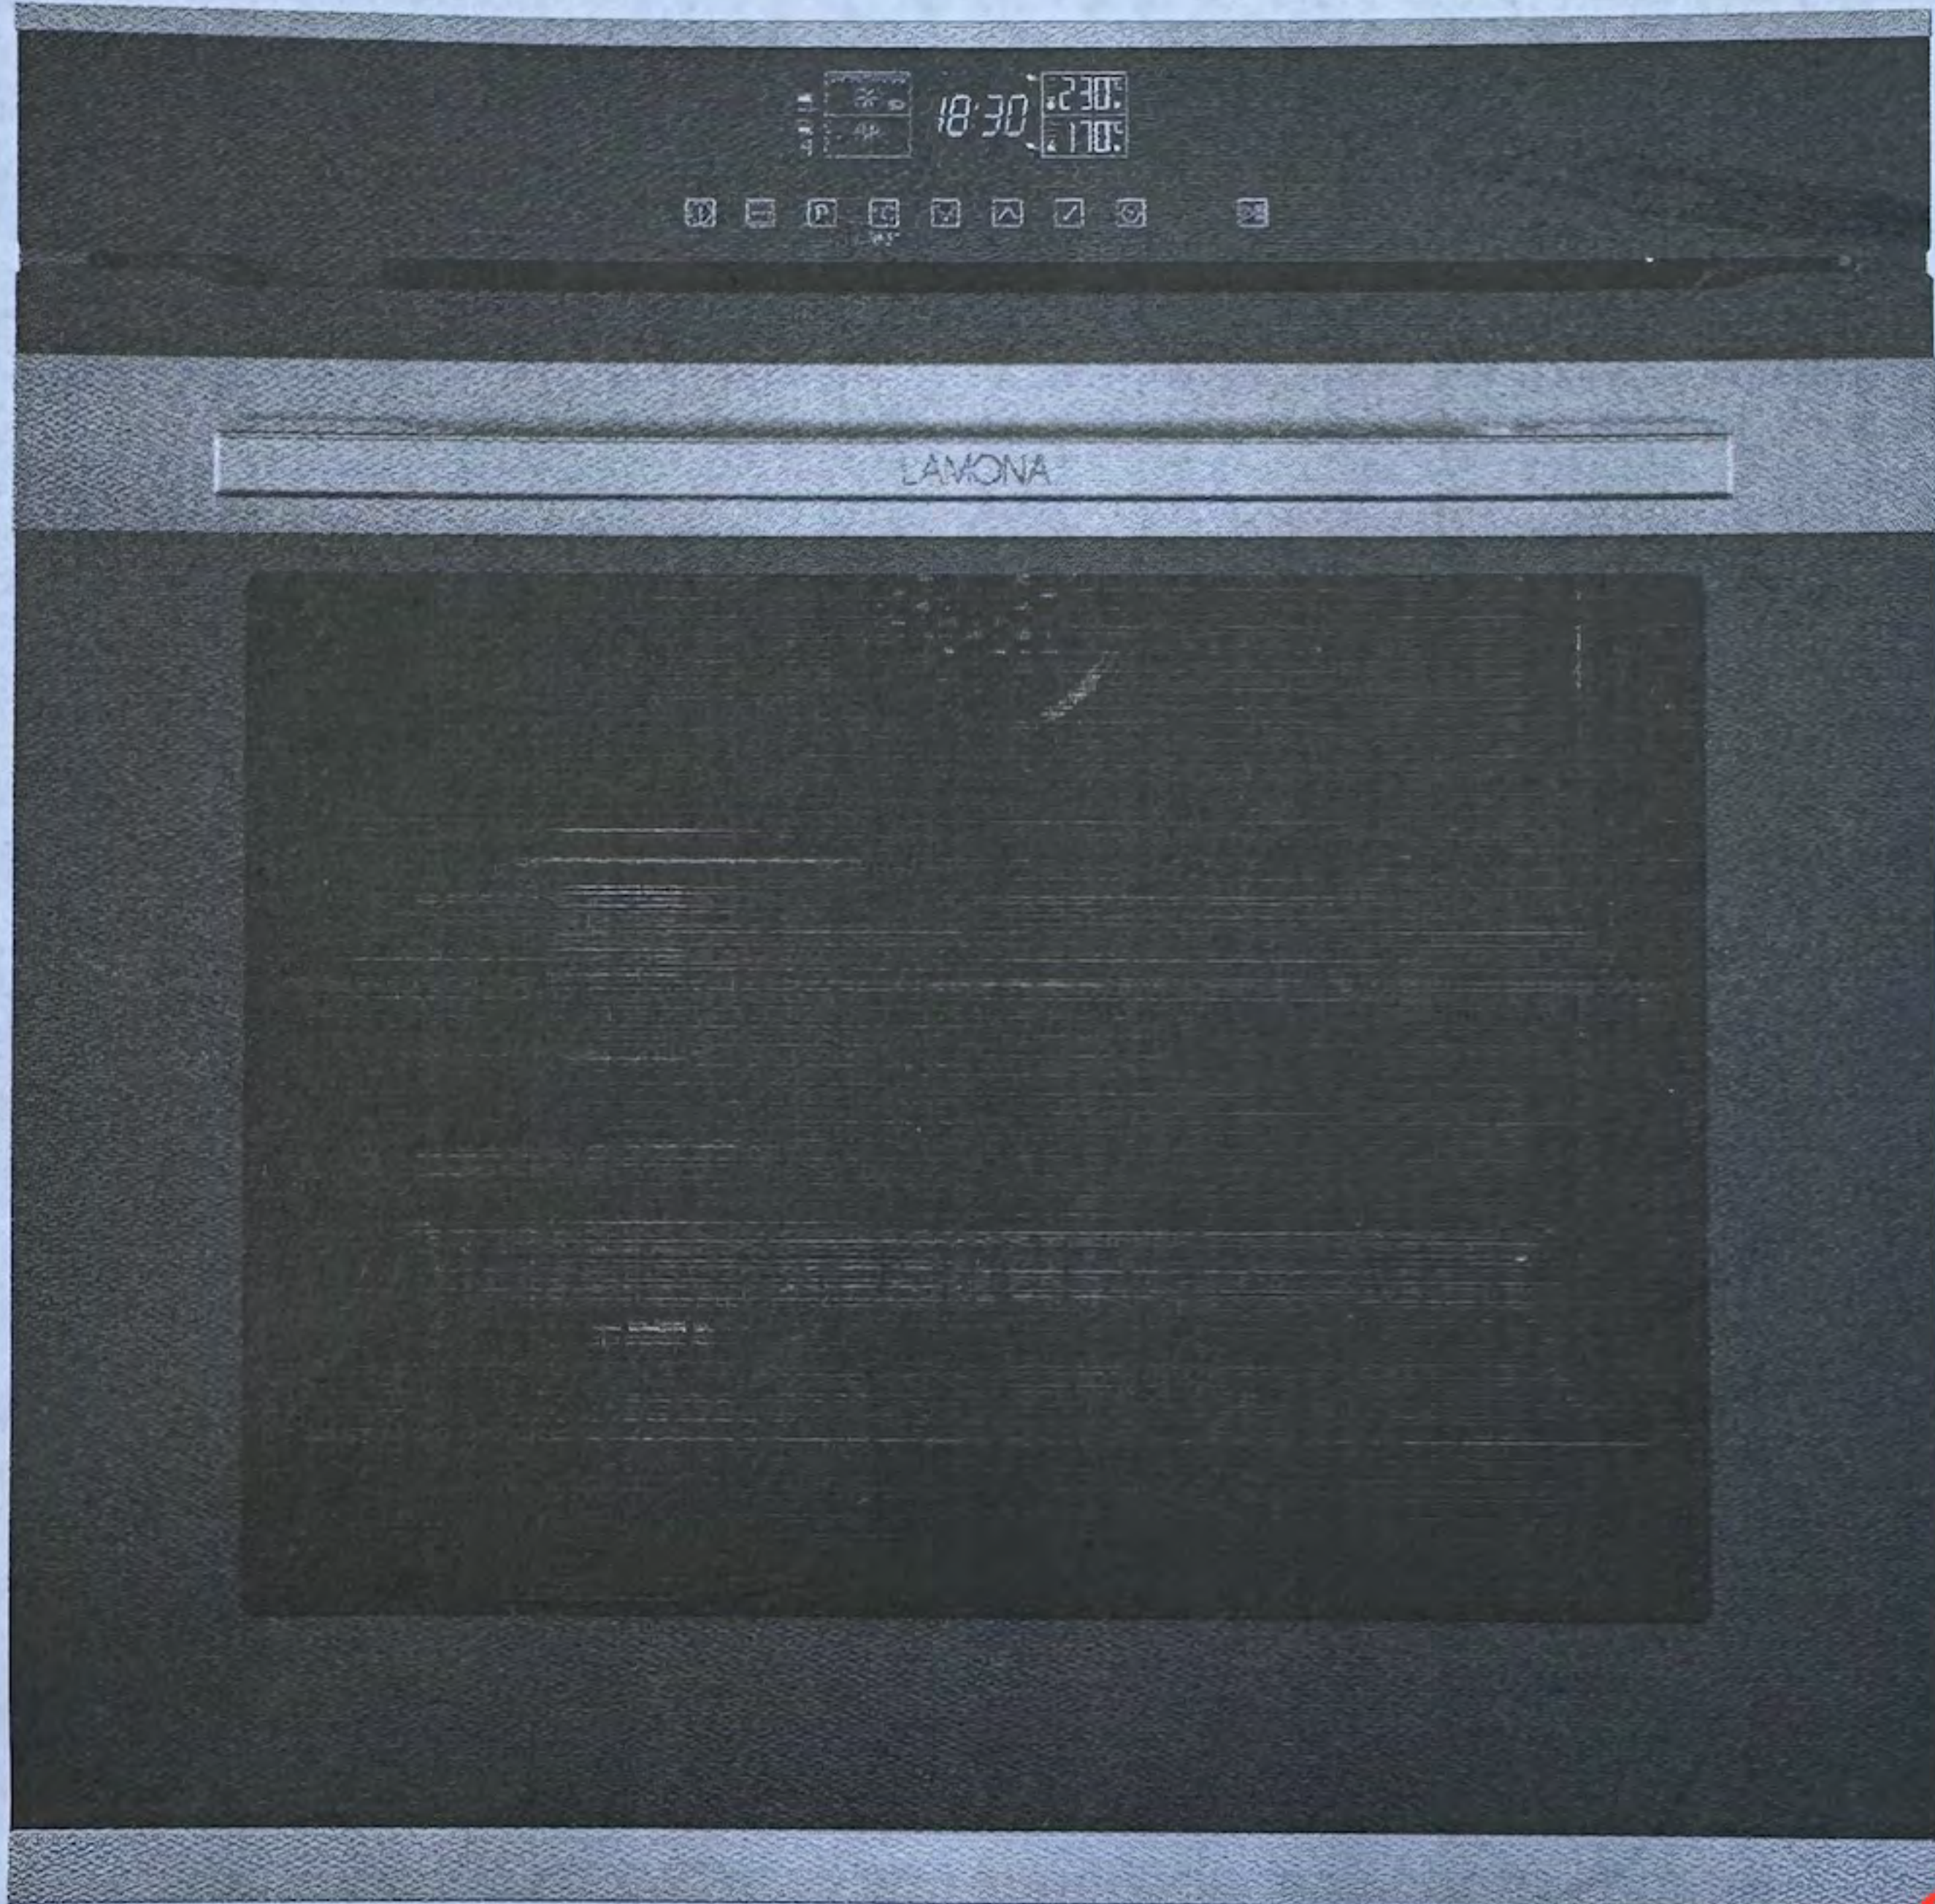


Built-In Single Split Cavity Oven

LAM3676



Derwent

Instructions and Installation

LAMONA

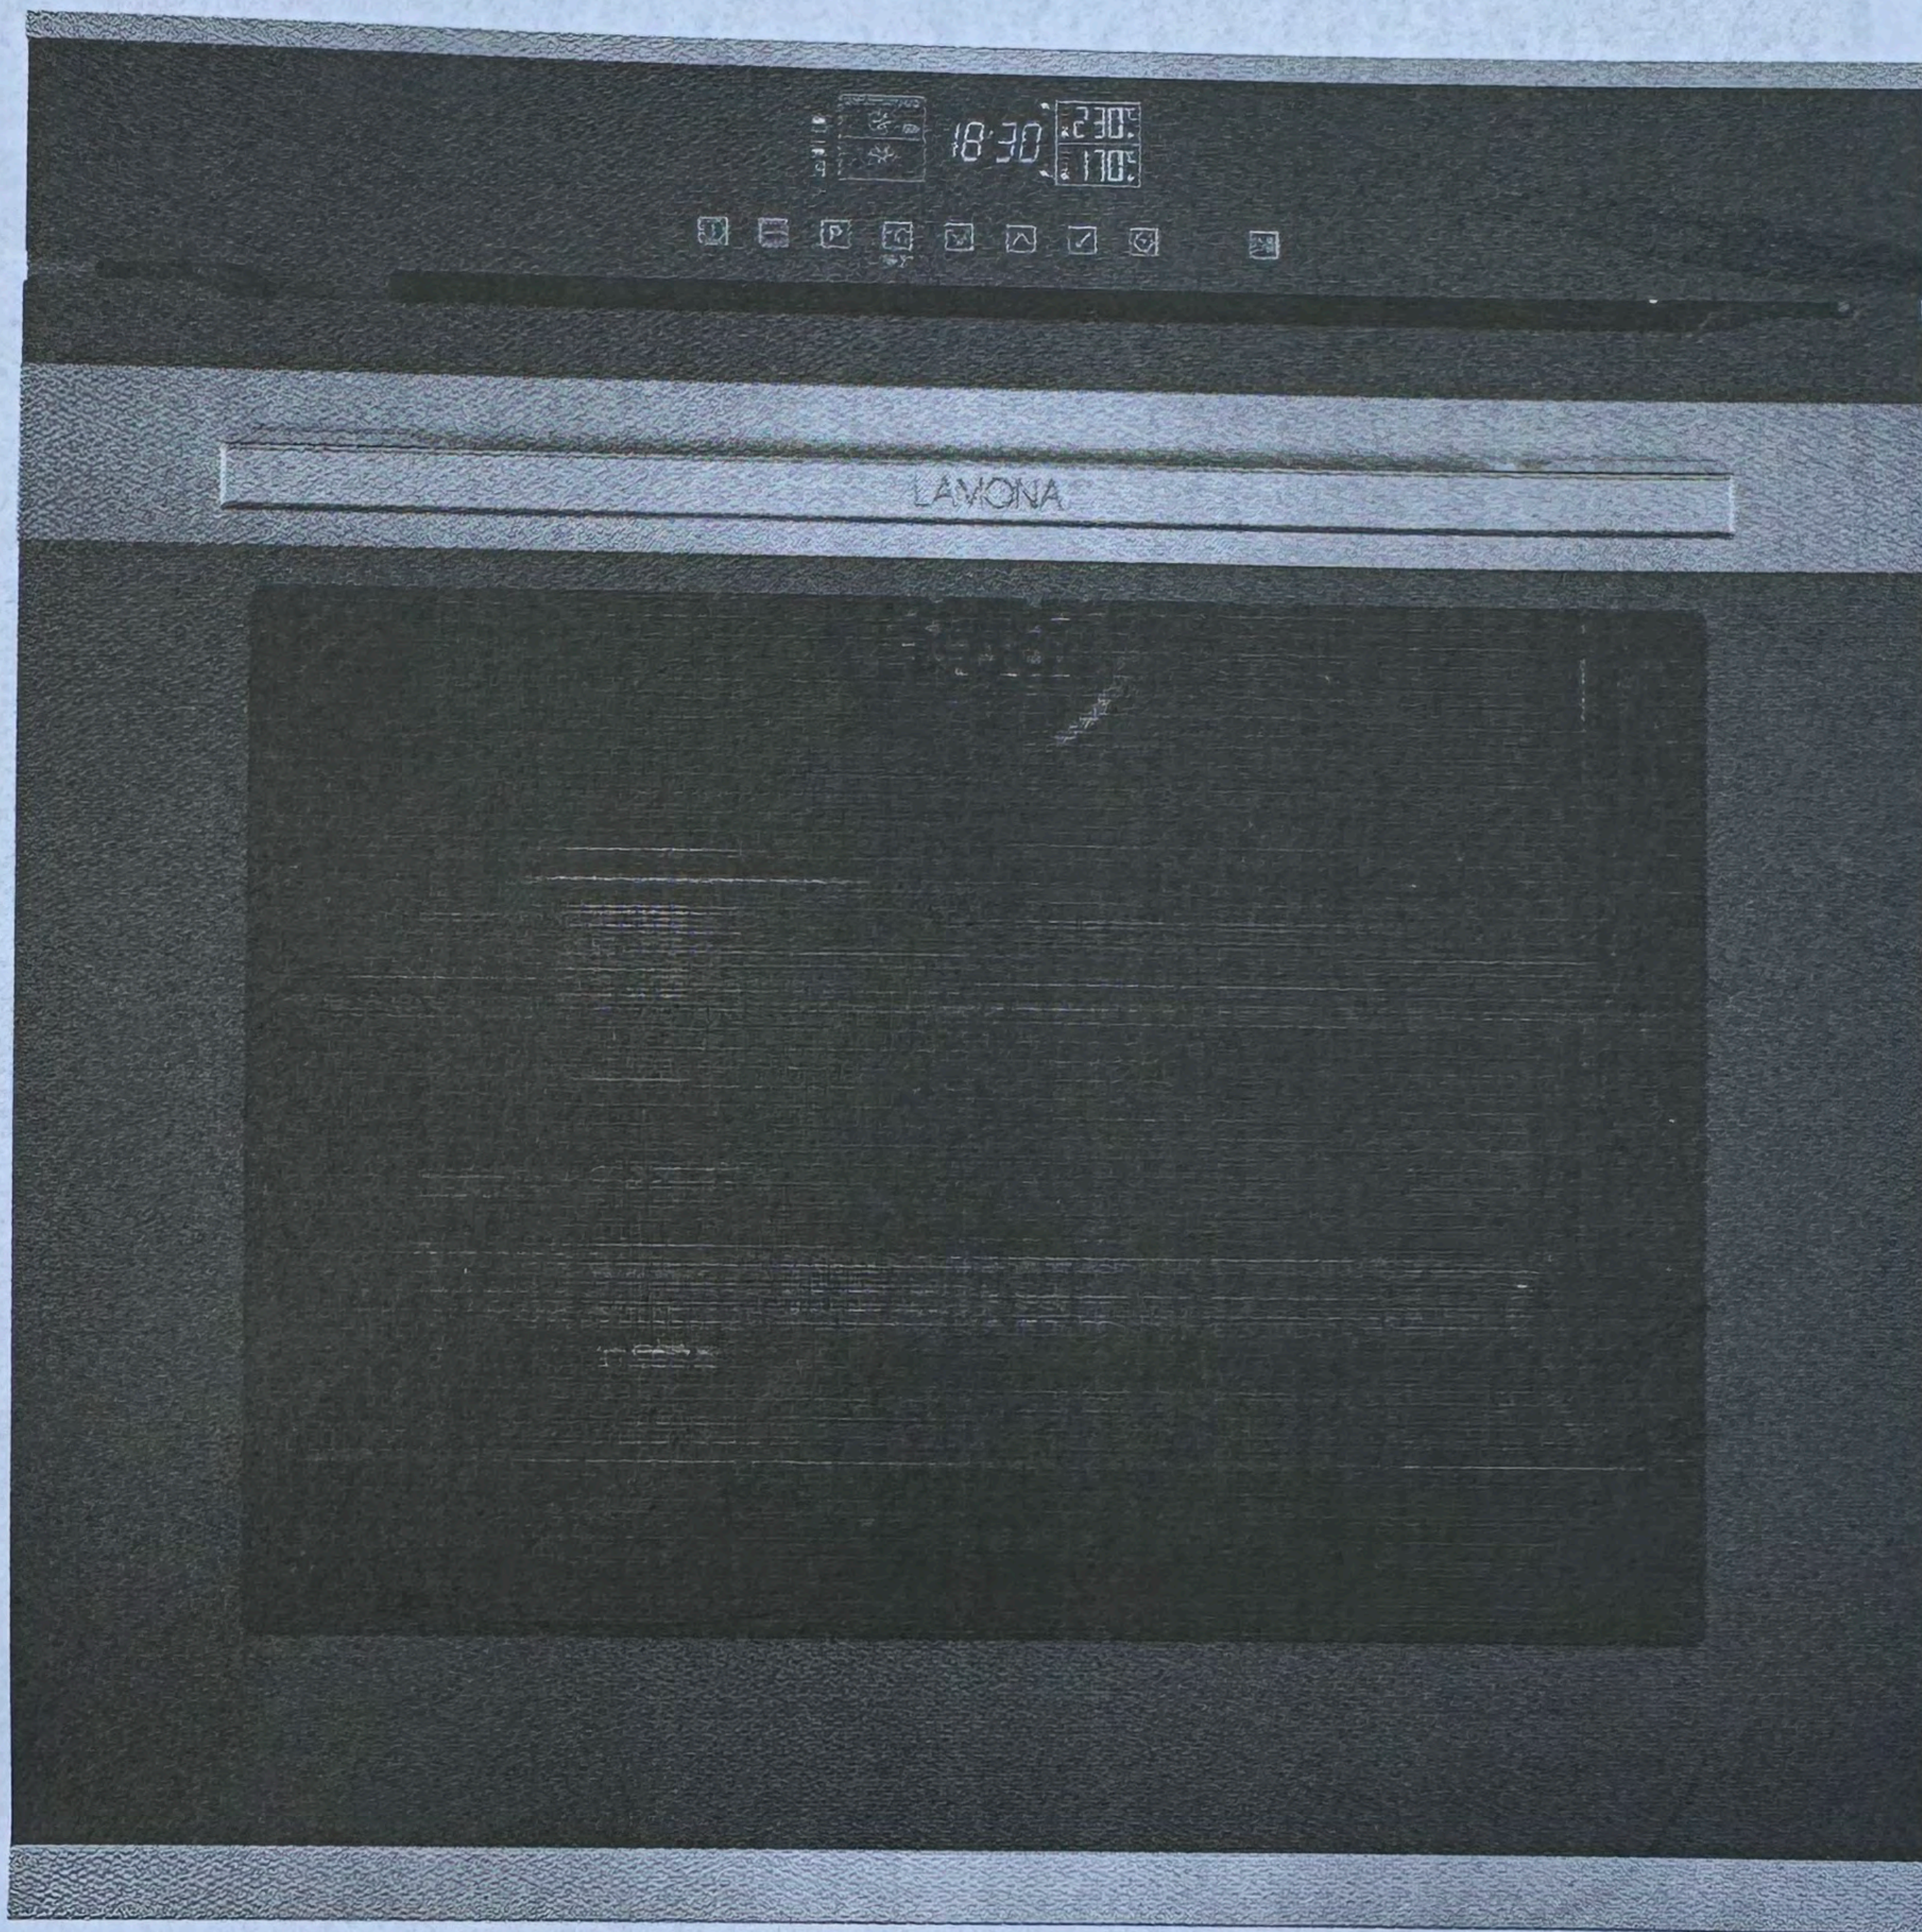
Register my appliance

www.howdens.com/appliance-registration

GLUTEN FREE

Built-In Single Split Cavity Oven

LAM3676



Instructions and Installation

LAMONA

Register ✓
my appliance

www.howdens.com/appliance-registration

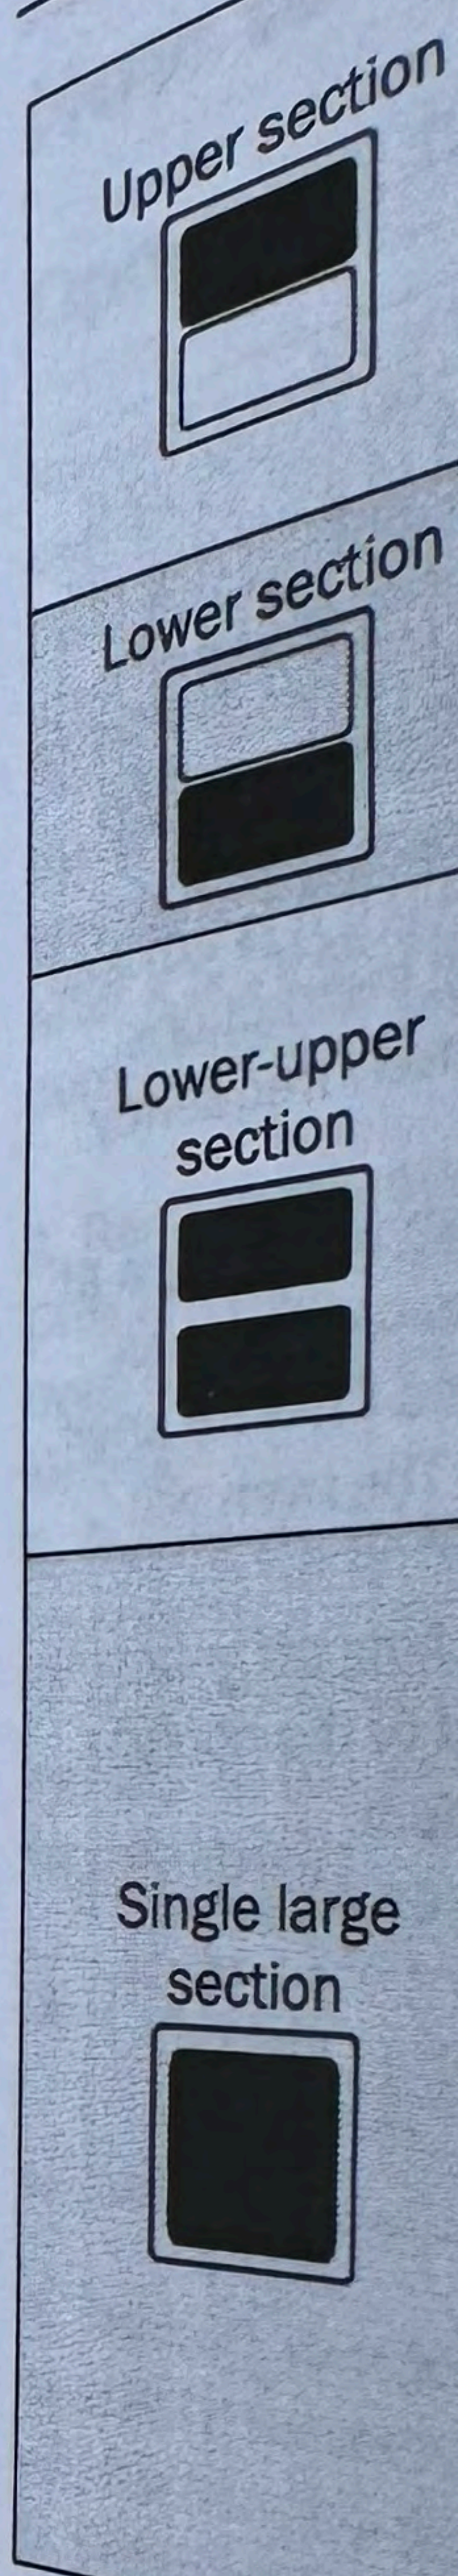
Operating modes

Oven functions

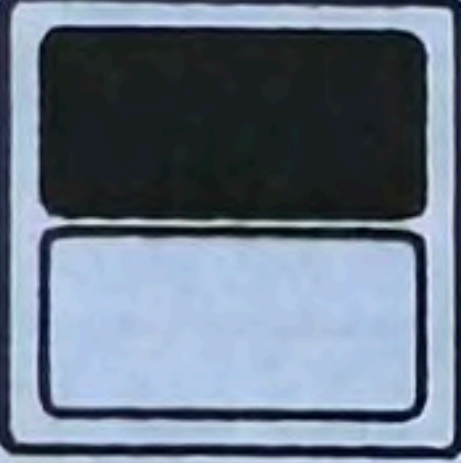
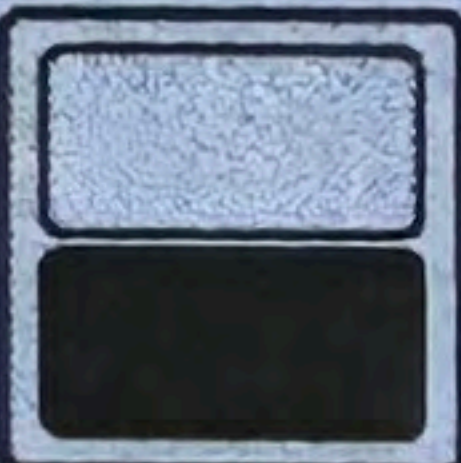


These functions apply to oven with a single large section only.

Symbol	Name	Description
	Static (Top and bottom heating)	Top and bottom heaters are in operation simultaneously. Cook with one tray only.
	Bottom heating	Only bottom heater is in operation. It is suitable for pizza and for subsequent browning of food from the bottom.
	Static fan (Fan supported bottom/top heating)	Top heater, bottom heater plus fan (in the rear wall) are in operation. Hot air is evenly distributed throughout the oven rapidly by means of the fan. Cook with one tray only.
	Defrost (Fan operated)	The oven is not heated. Only the fan (in the rear wall) is in operation. Suitable for thawing frozen granular food slowly at room temperature and cooling down the cooked food.
	Fan assisted cooking	Only the fan heater in the rear wall is in operation. Hot air heated by the fan heater is evenly distributed throughout the oven rapidly by means of the fan. In most cases, preheating is not required.
	Top Heater and fan (Fan assisted top heating)	Top heater and the fan at the rear wall are in operation. Hot air is distributed better with fan compared to the situation where only top heating is in operation.
	Pizza	Bottom heater and the fan assisted heater (at the rear wall) are in operation simultaneously. Suitable for baking pizza.

Symbol	Name	Description
	Multi "3D" cooking	Top heater, bottom heater and the fan assisted heater are in operation simultaneously. Cook with one tray only.
	Economic grill	Only the inner section of the top heater at oven ceiling operates. Suitable for grilling small and medium sizes of meat.
	Full grill	Inner and outer sections of the top heater at oven ceiling are in operation simultaneously. Suitable for grilling medium size meat pieces.
	Grill + Fan (Fan supported grill)	Rear wall fan operates along with the inner and outer sections of the top heater at oven ceiling. Hot air is evenly distributed throughout the oven rapidly by means of the fan. Suitable for grilling medium size meat pieces.
	Warm keeping	Used for keeping food at a temperature ready for serving for a long period of time. Do not use for cooking food.
	Eco fan cooking	Only the fan heater in the rear wall is in operation. To save power, you can use this function instead of the cooking operations that you would perform by using Fan Heating at 160-220C temperature range. But, the cooking time will increase a little bit. Cooking times related to this function are indicated in "Eco Fan Cooking" table.
	Low temperature cooking	Food is heated simultaneously from the top and bottom. It is suitable for slow-cooking of roasted/seared pieces of meat (veal, lamb, poultry etc.) in an open container at low temperature. This function ensures that the meat is juicy and soft on the inside. Please use hygienically suitable types of meat. On the hob, grill etc., pre-roast/sear all surfaces of the meat in a hot pan. You can cook the pre-roasted/seared meat with the "low temperature cooking" function for a long time. Cook with one tray only.



Function table indicates... in the oven and the temperatures. Rec... when the function i... Functions may... While making a... will flash on th... Program will be... failure. You mu... Current time ca... operating in an... full automatic p... Even if the over... lights up if the... Due to safety re... be set for "Cook... at all positions... "Low Temp. Cook

<p>Upper section</p> 	<p>Fan heating Economic fan Top heater+fan Full grill+Fan Full grill Defrost Economic grill</p>
<p>Lower section</p> 	<p>Fan heating Economic fan Defrost Bottom heating Pizza</p>
<p>Lower-upper section</p> 	<p>Fan assisted+Fan assisted Full grill+Fan assisted Defrost+Defrost Economic grill+Fan assisted Fan assisted+Bottom heater Fan assisted+Pizza</p>
<p>Single large section</p> 	<p>Static Static+fan Fan heating Multi cooking (3D) Pizza Top heater+fan Full grill+Fan Full grill Economic grill Economic fan Bottom heating Warm keeping Low temperature cooking Defrost</p>

Function table indicates the functions that can be used in the oven and their respective maximum and minimum temperatures. Recommended temperature is displayed when the function is selected.

- Functions may vary depending on product model.
- While making any adjustment, related symbols will flash on the display.
- Program will be cancelled in case of power failure. You must reprogram the oven.
- Current time cannot be set while the oven is operating in any function, or semi automatic or full automatic programming is made on the oven.
- Even if the oven is switched off, the oven lamp lights up if the door is opened.
- Due to safety reasons, maximum time that can be set for "Cooking time" is limited with 6 hours at all positions apart from "Warm Keeping" and "Low Temp. Cooking" functions.

Single large section

Function	Temperature range (°C)
Static	40-280
Static + fan	40-280
Fan heating	40-250
Multi cooking (3D)	40-250
Pizza	40-280
Top heater+fan	40-280
Full grill+Fan	40-280
Full grill	40-280
Economic grill	40-280
Economic fan	160-220
Bottom heating	40-220
Warm keeping	40-100
Low temperature cooking	50-150
Defrost	-

Upper section

Function	Temperature range (°C)
Fan heating	40-250
Top heater+fan	40-280
Full grill+Fan	40-280
Full grill	40-280
Economic grill	40-280
Economic fan	160-220
Defrost	-


Lower section

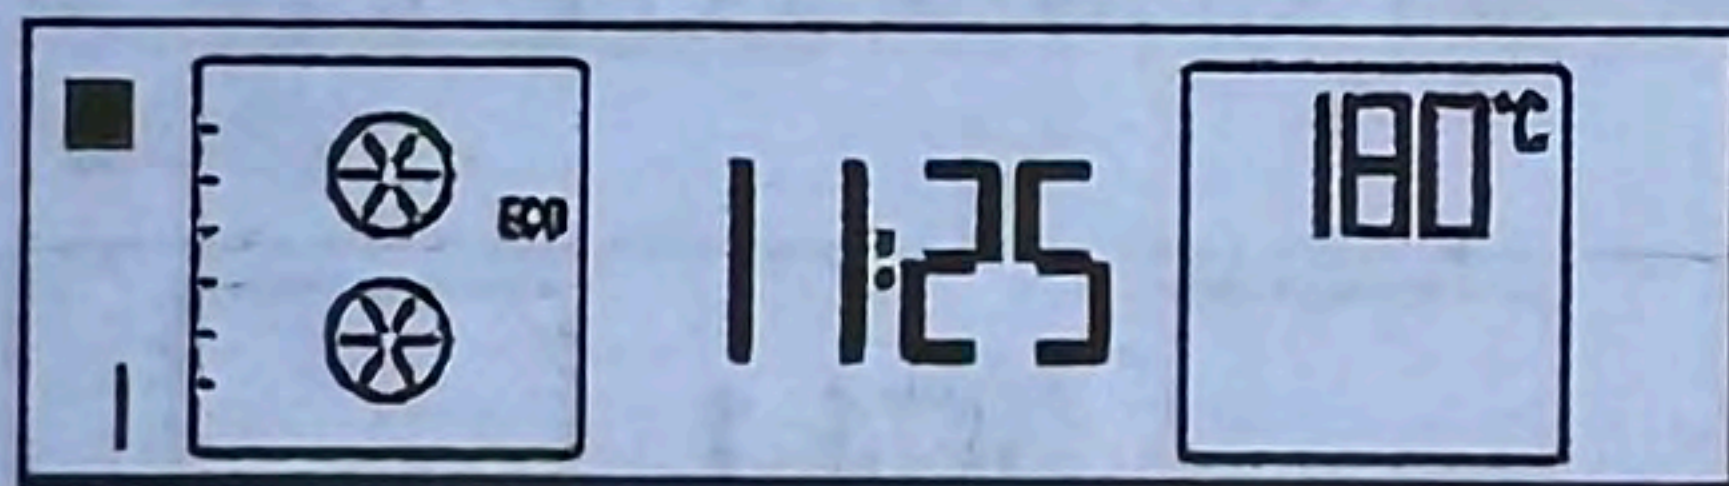
Function	Temperature range (°C)
Fan heating	40-250
Pizza	40-280
Economic fan	160-220
Bottom heating	40-220
Defrost	-

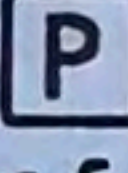


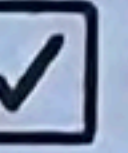
How to operate the main oven and grill

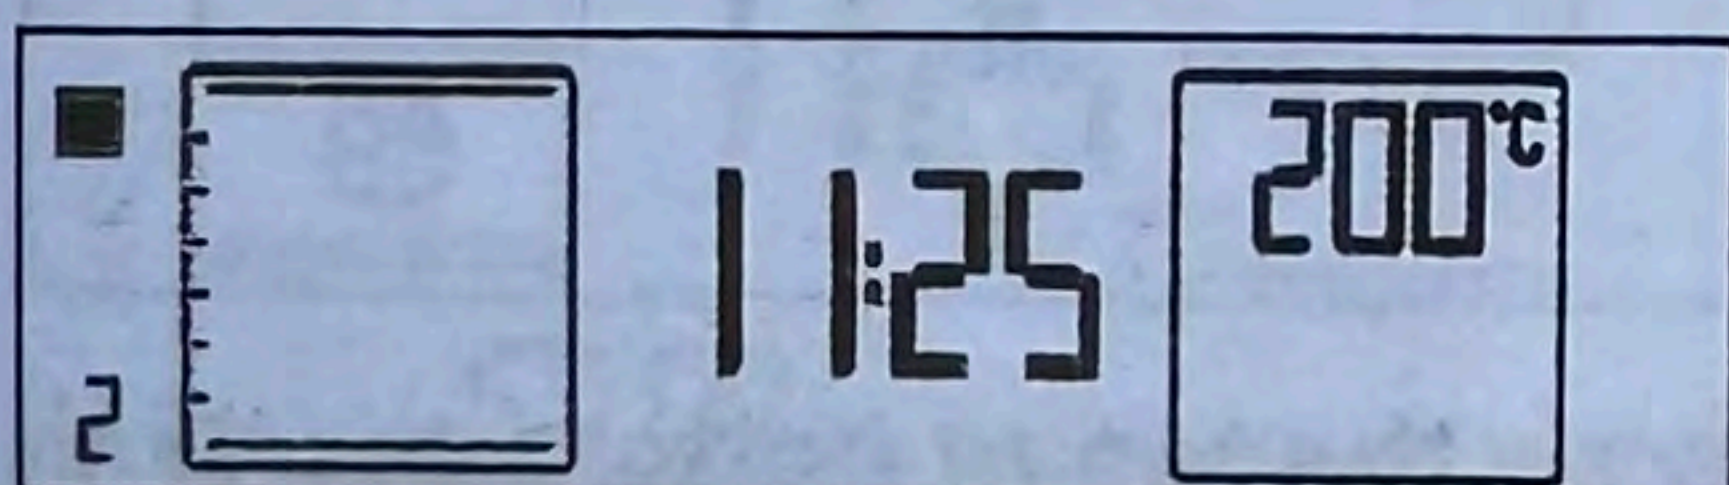
Operating a single oven section




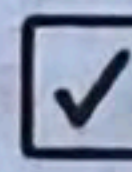
Manual cooking by selecting temperature and operating function: During manual operation, the oven will operate regardless of the cooking time after the function and temperature selection is made. The oven will not switch off automatically at the end of the cooking time. Cooking should be ended by the user. Oven returns to standby display after it is powered on for the first time and the current time is set. Only the current time appears.

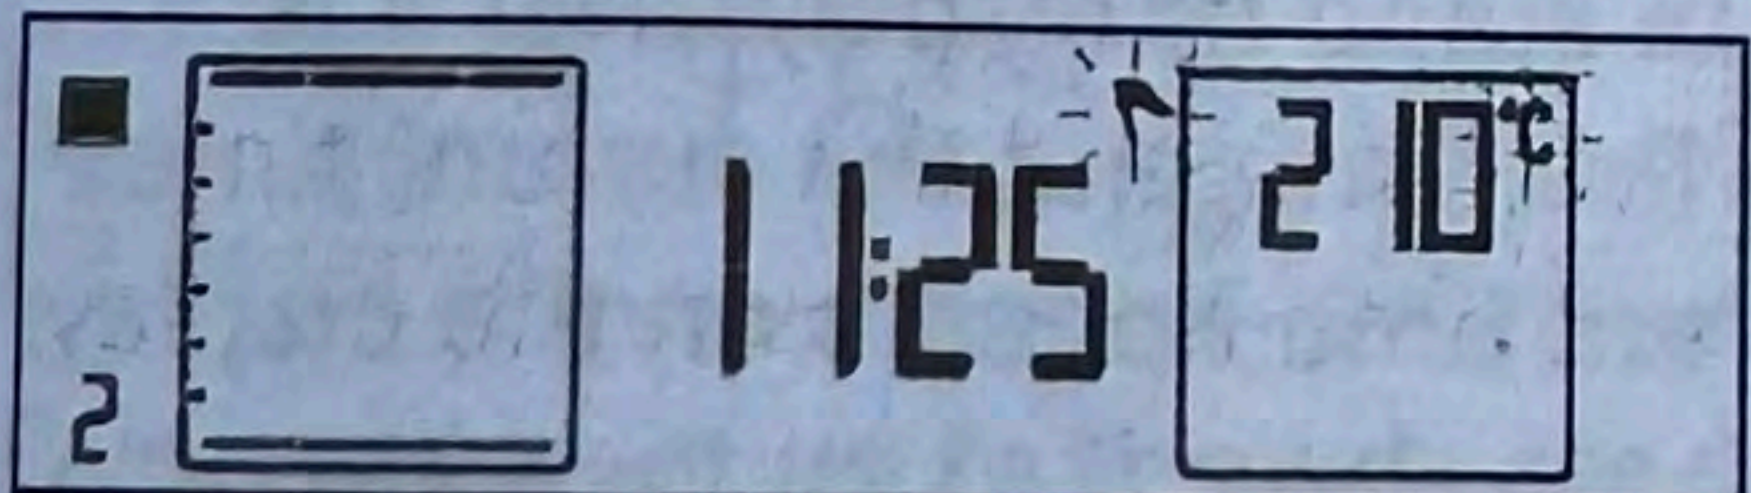
1. Remove the middle section plate from the oven. Only after the middle section plate is removed the oven timer will work in single large section cooking setting.
2. Switch on the oven touching the  key for two seconds.
3. When the oven is switched on, the first function peculiar to the single large section cooking will be displayed.


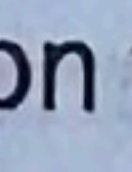
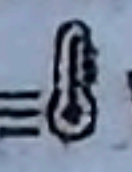


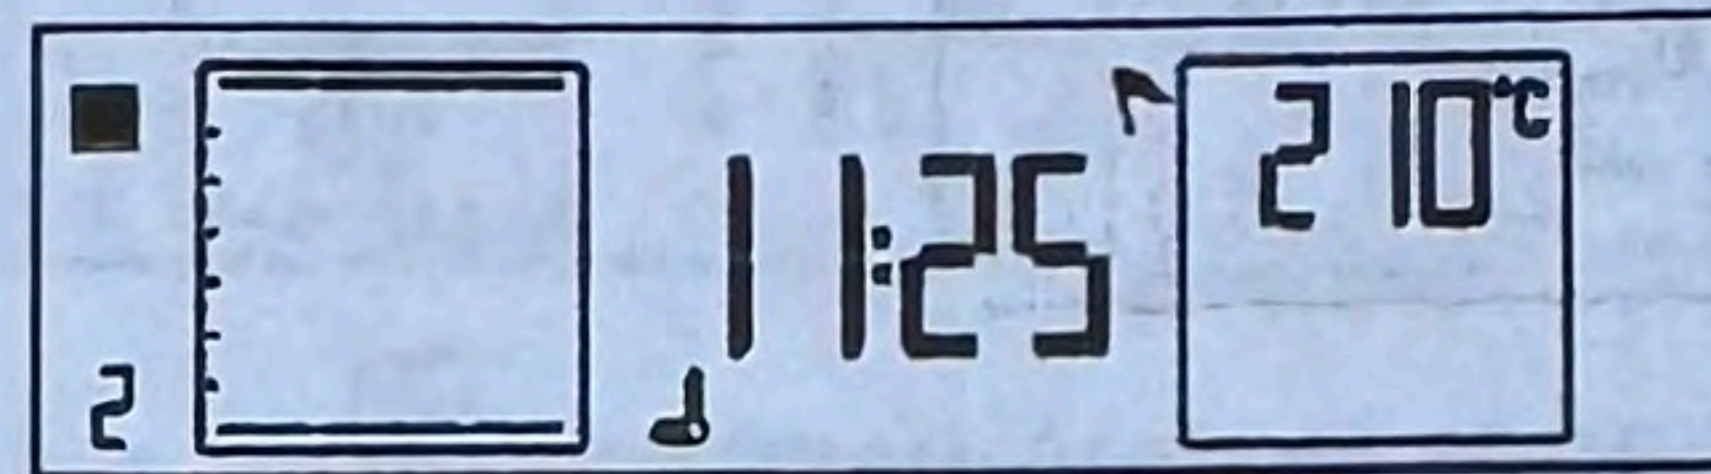
4. Touch  to enter the display for setting the operating function. The relevant function number will flash on the display.
5. Set the desired cooking function touching the keys. Touch   the  to confirm setting

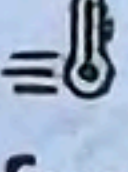
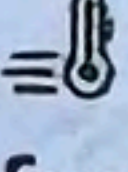
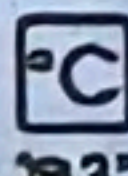



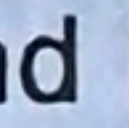
6. If you want to change the temperature, touch once to reach the temperature display °C and  will flash on the display.
7. Touch   to set the desired temperature. When the desired value is reached, touch  to confirm the temperature.

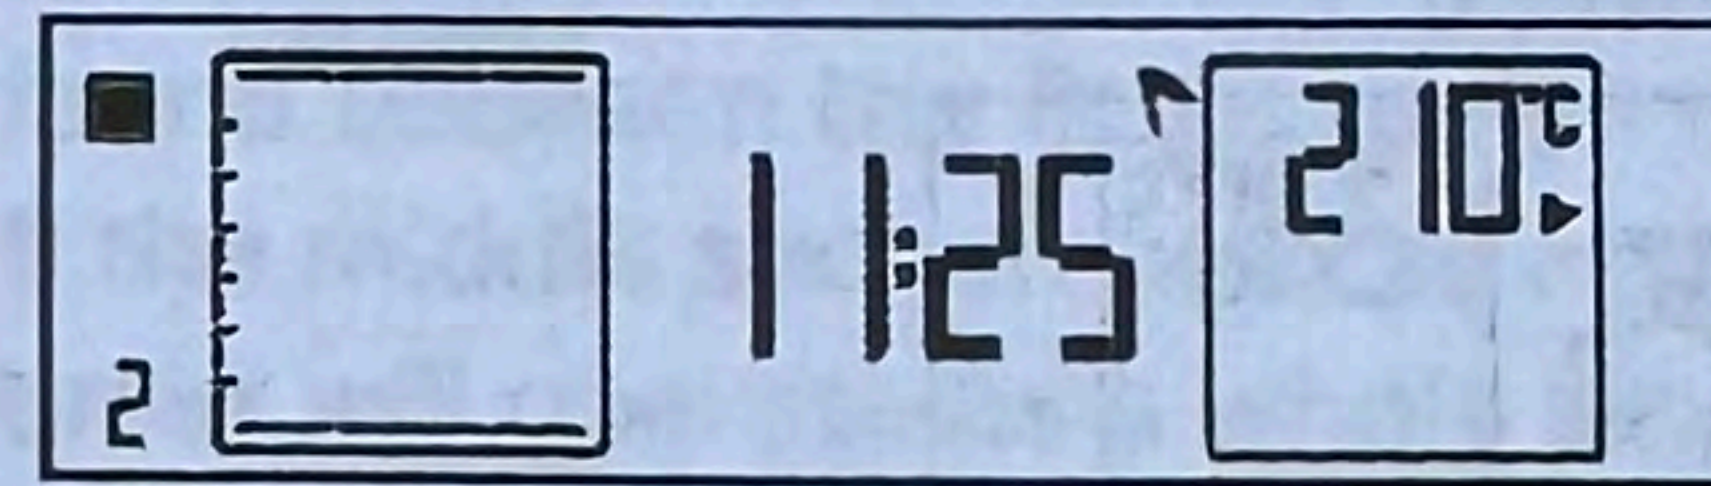


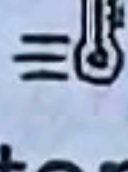
8. For booster (Rapid Heating), touch  for approximately 3 seconds until  appears on the display.  will appear and the booster setting will be activated.




When the booster setting is made, the oven operates in maximum power to reach the set temperature. When the set temperature is reached  will disappear. Booster setting is active for the functions during which  is displayed when  is touched for a long time. Booster can only be activated for cooking operations performed in the single large section.

9. Put your dish into the oven and close the door.
10. If cooking function and temperature values are suitable, touch  for two seconds to start cooking. Cooking will start and  will appear on the display.




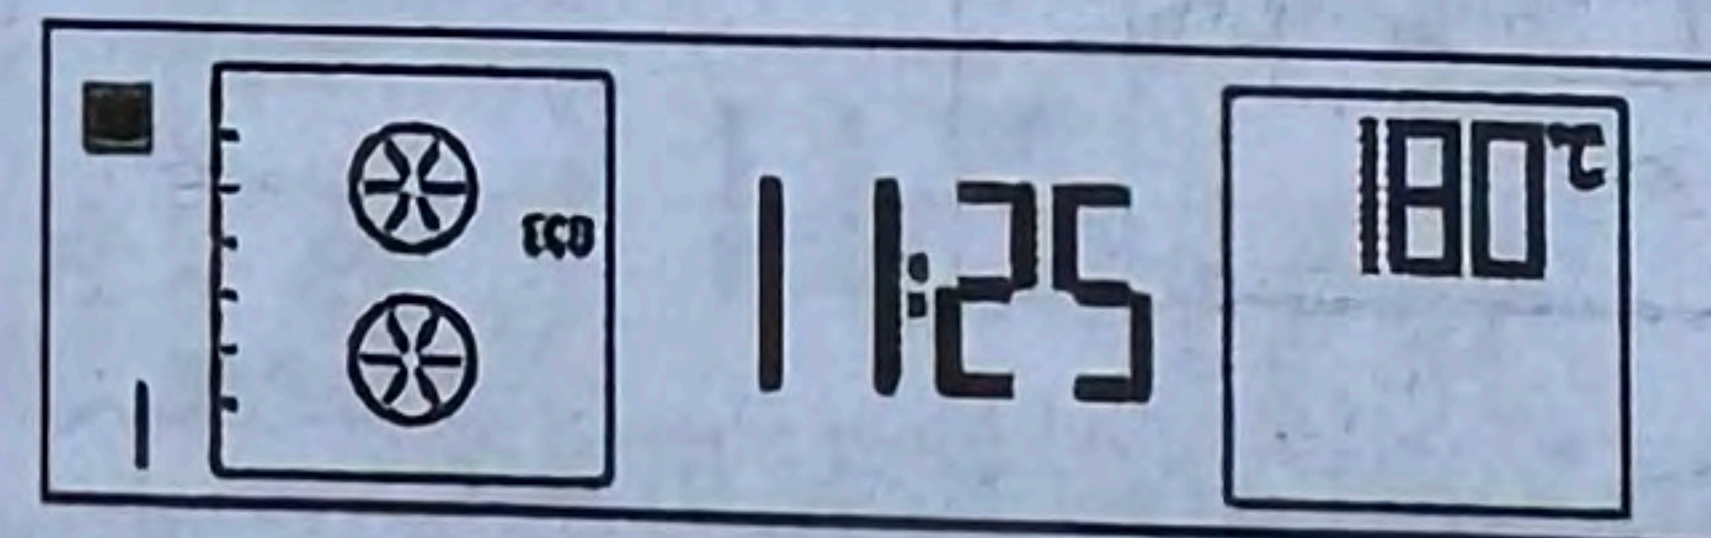
Oven will heat up to the adjusted temperature. All segments of the inner oven temperature symbol  will turn on when the oven reaches the set temperature.


11. When the cooking process is completed touch  key again for two seconds to end the cooking.

Cooking by setting the cooking time;

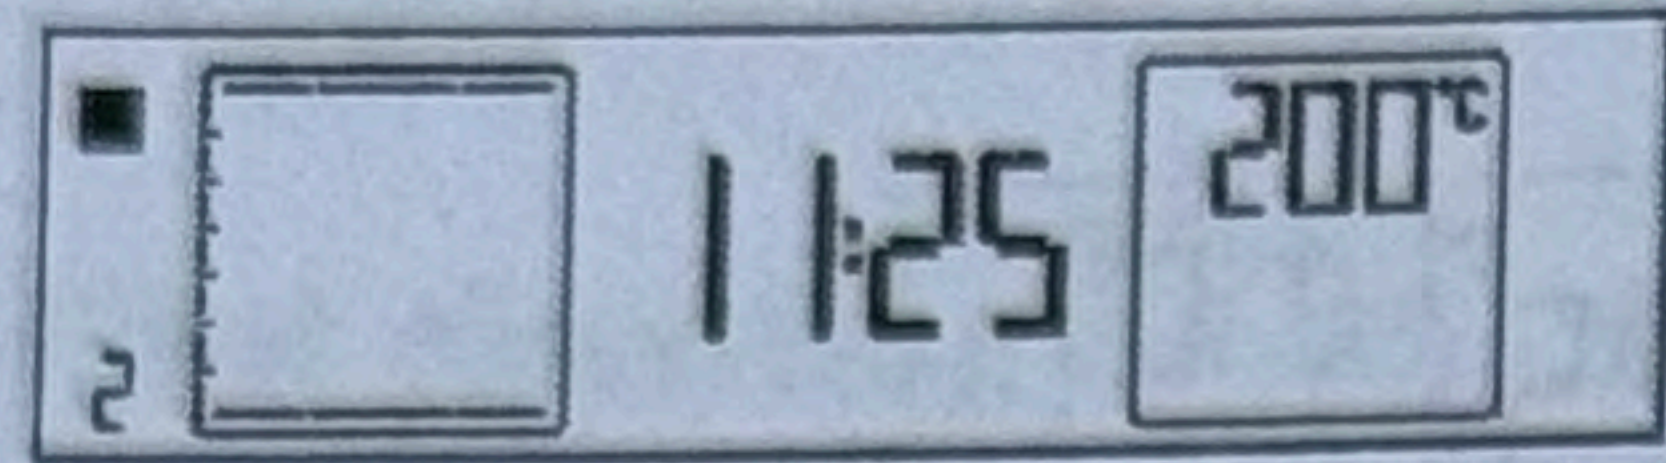
You can make your oven switch off automatically at the end of cooking time by selecting the temperature and function specific to your meal and setting the cooking time. Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

1. Remove the middle section plate from the oven. Only after the middle section plate is removed the oven timer will work in single large section cooking setting.
2. Switch on the oven touching the  key for two seconds.
3. When the oven is switched on, the first function peculiar to the single large section cooking will be displayed.

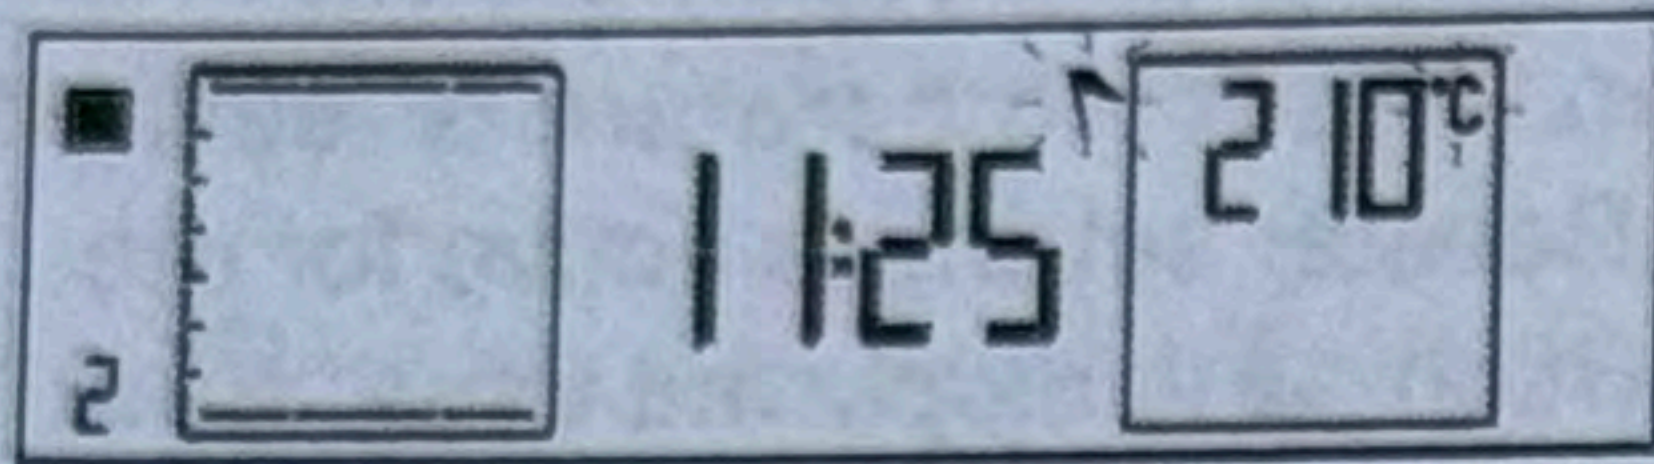


4. Touch  to enter the display for setting the operating function number will flash on the display.

5. Touch to set an operating function.

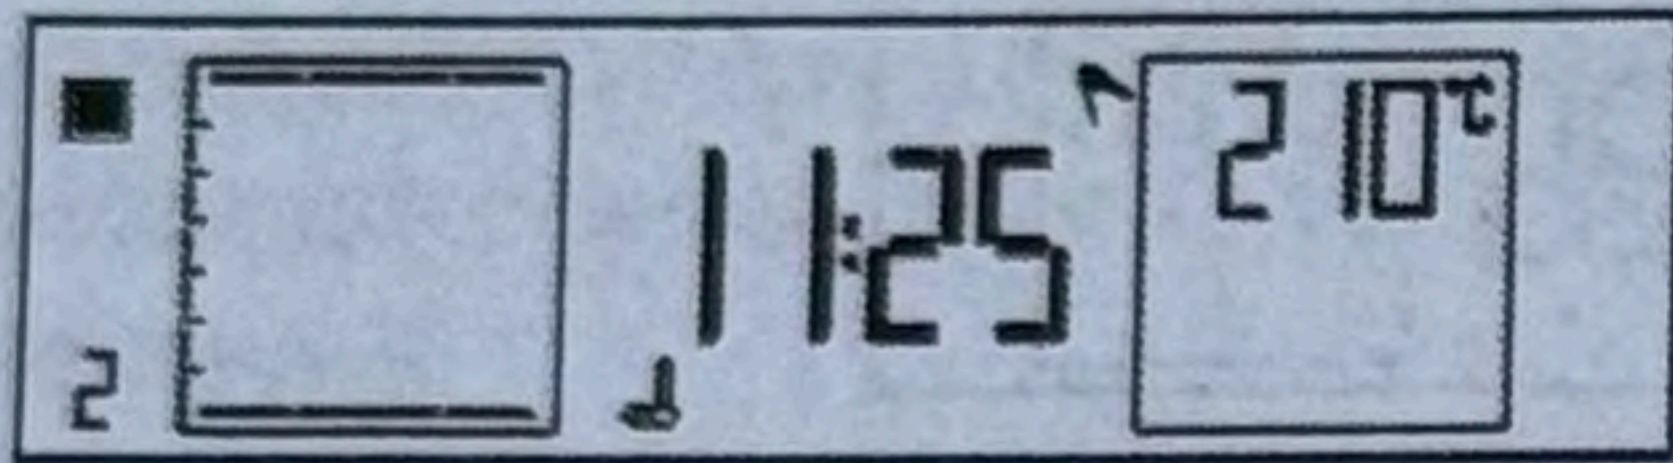


6. If you want to change the temperature, touch once to reach the temperature display. °C symbol will flash on the display.



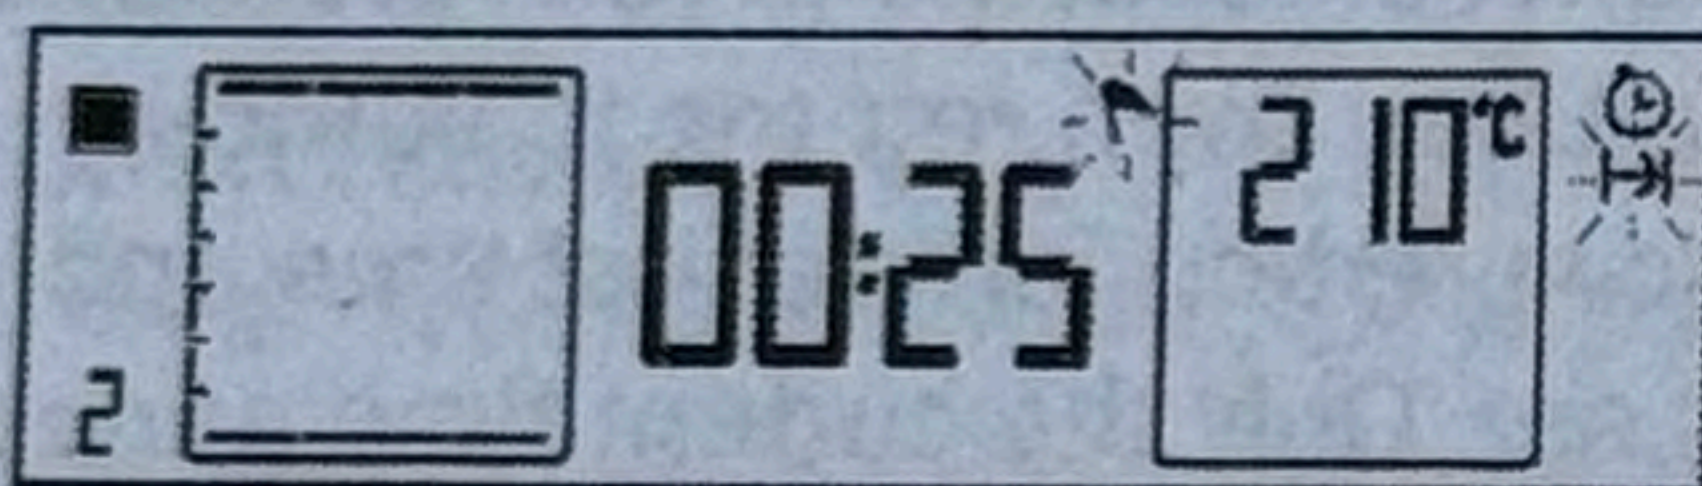
7. Touch to set the desired temperature. When the desired value is reached, touch to confirm temperature.

8. For Booster (Rapid Heating), touch for approximately 3 seconds until appears on the display. will appear and the booster setting will be activated.



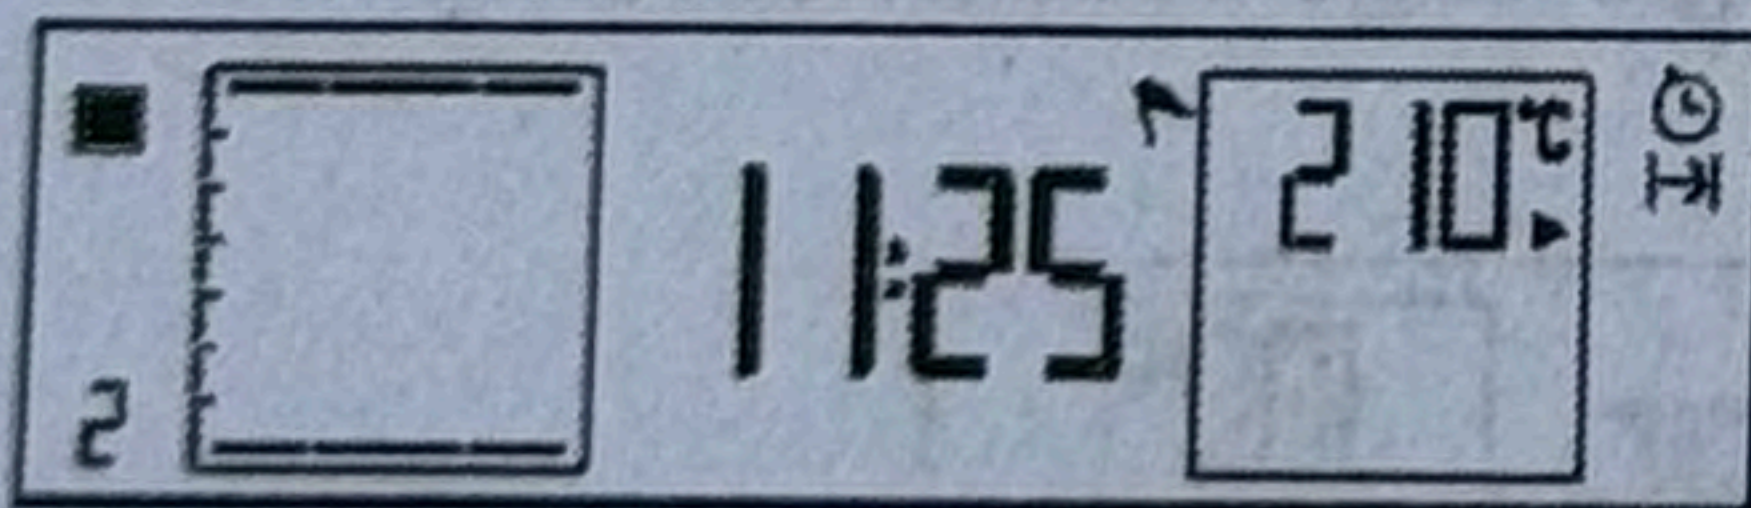
When the booster setting is made, the oven operates in maximum power to reach the set temperature. When the temperature is reached will disappear. Booster setting is active for the functions during which is displayed when is touched for a long time. Booster can only be activated for cooking operations performed in the single large section.

9. Touch once for coking time. will flash the display.



10. Touch to set the cooking time and confirm the setting by touching . Once the time is set, and will remain on the display.

11. Put your dish into the oven and close the door.
12. If cooking function, temperature and time values are suitable, touch for 2 seconds to start cooking. Cooking will start and will appear on the display.



Your oven will readily start operating in the selected function and will increase the inner temperature to the set temperature. It maintains

this temperature until the end of the set cooking time. Each grade of the inner temperature symbol will be lit as inner temperature reaches to the set temperature. Additional active heaters and recommended tray position appear in the Function display.

All segments of the inner oven temperature symbol will turn on when the oven reaches the set temperature.

13. After the cooking is completed, and will flash on the display and an alarm signal will sound.

14. To stop the alarm signal, just touch any key. The oven will switch off automatically.

15. If you want the oven to continue operating, press for 2 seconds. The oven will continue cooking for an indefinite period of time.

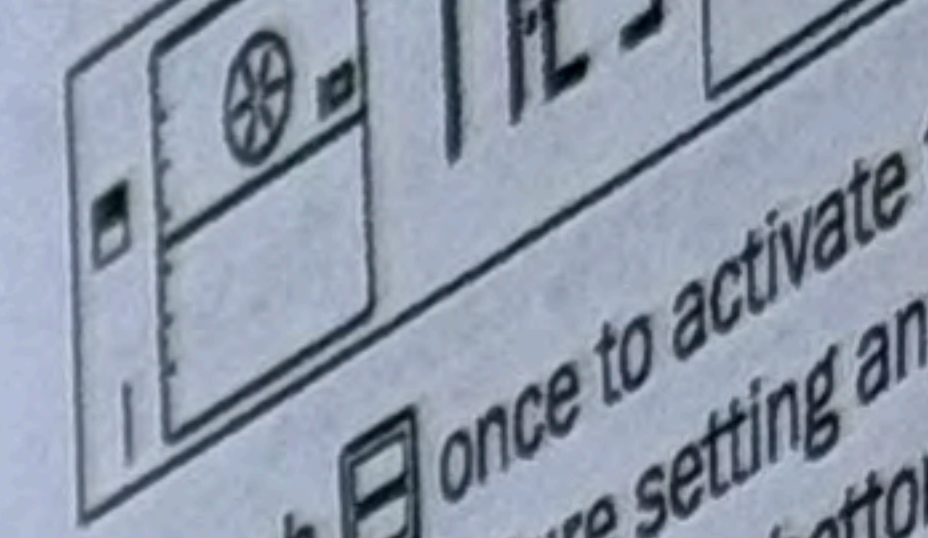
If you want to cancel the setting after performing the cooking setting by adjusting the cooking time, you will need to reset the cooking time. You can also switch off the oven by touching if you want.

Using the oven only as the top or bottom section Manual cooking by selecting temperature and operating function

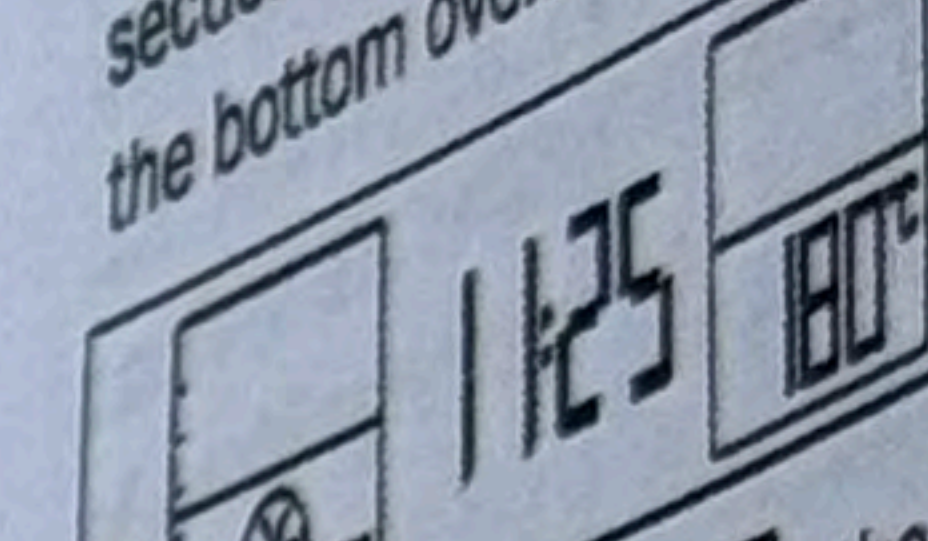
During manual operation, the oven will operate regardless of the cooking time after the function and temperature selection is made. The oven will not switch off automatically at the end of the cooking time. Cooking should be ended by the user. Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

1. Place the middle section plate in its housing found between the 3rd and 4th rack guides. If the middle section plate is not placed, the oven timer will operate as a whole single section.

2. Switch on the oven touching seconds.
3. When the oven is switched on special to the top section cooking



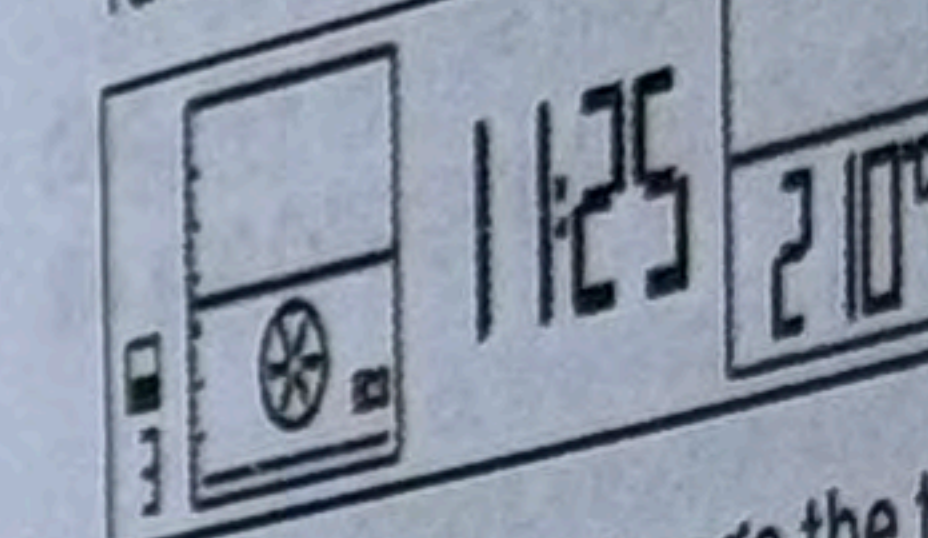
4. Touch once to activate oven. Temperature setting and initiation steps for both bottom sections will iterate in the same the bottom oven is shown as s



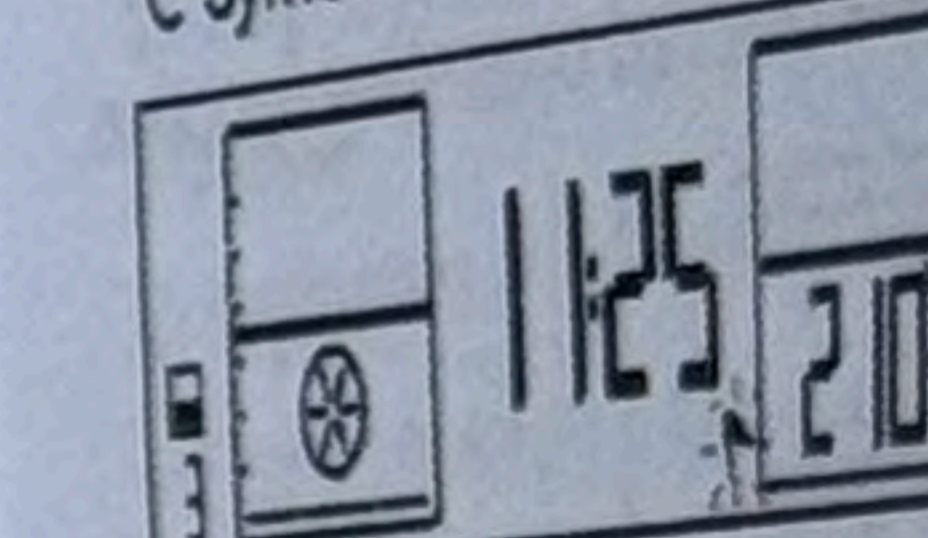
Each time you touch , the both bottom and top sections only will be activated respectively

5. Touch to enter the display operating function. The relevant function number display.

6. Touch to set the desired function.



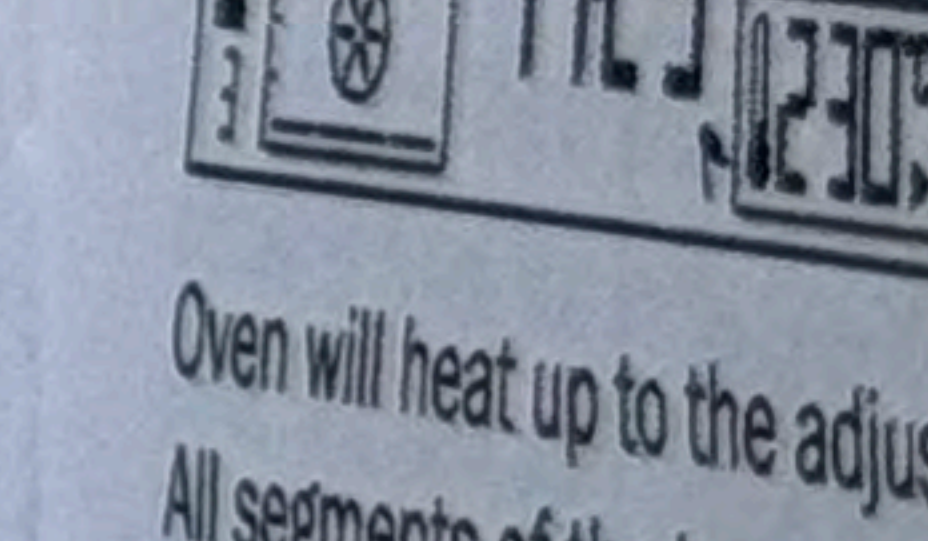
7. If you want to change the temperature once to reach the temperature °C symbol will flash on the display



8. Touch to set the desired temperature. When the desired value is reached to confirm temperature.


9. Put your dish into the oven

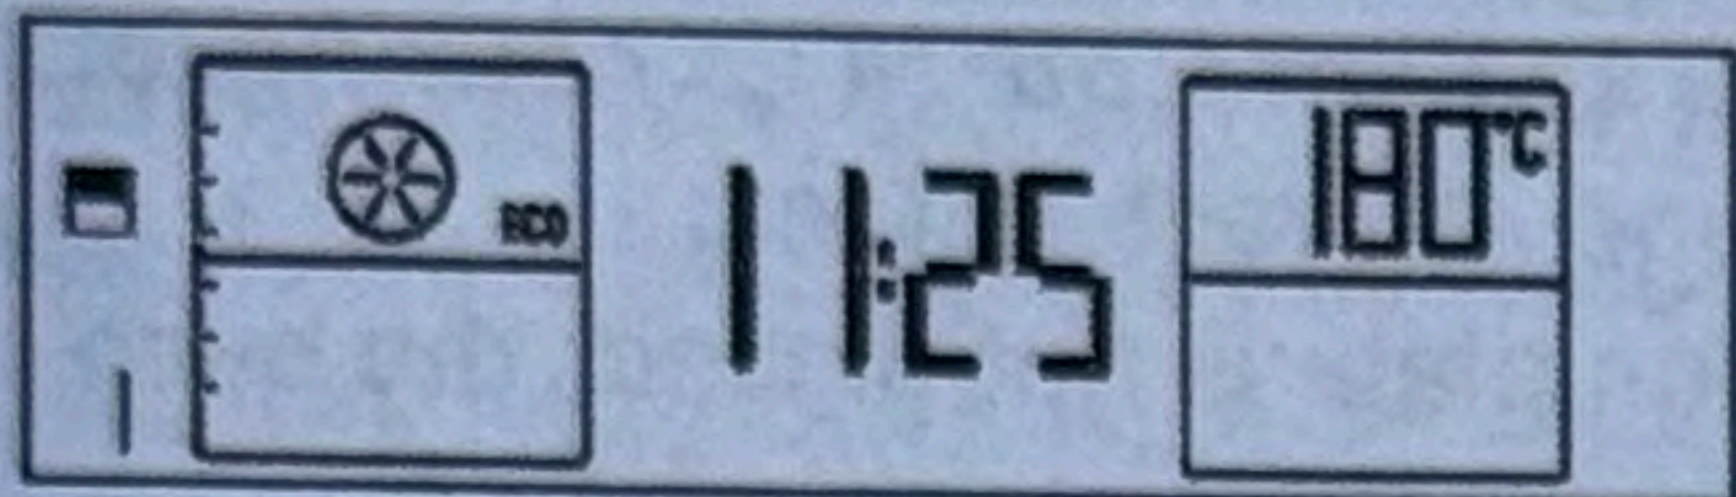
10. If cooking function and temperature suitable, touch for two seconds. Cooking will start and will appear on the display.




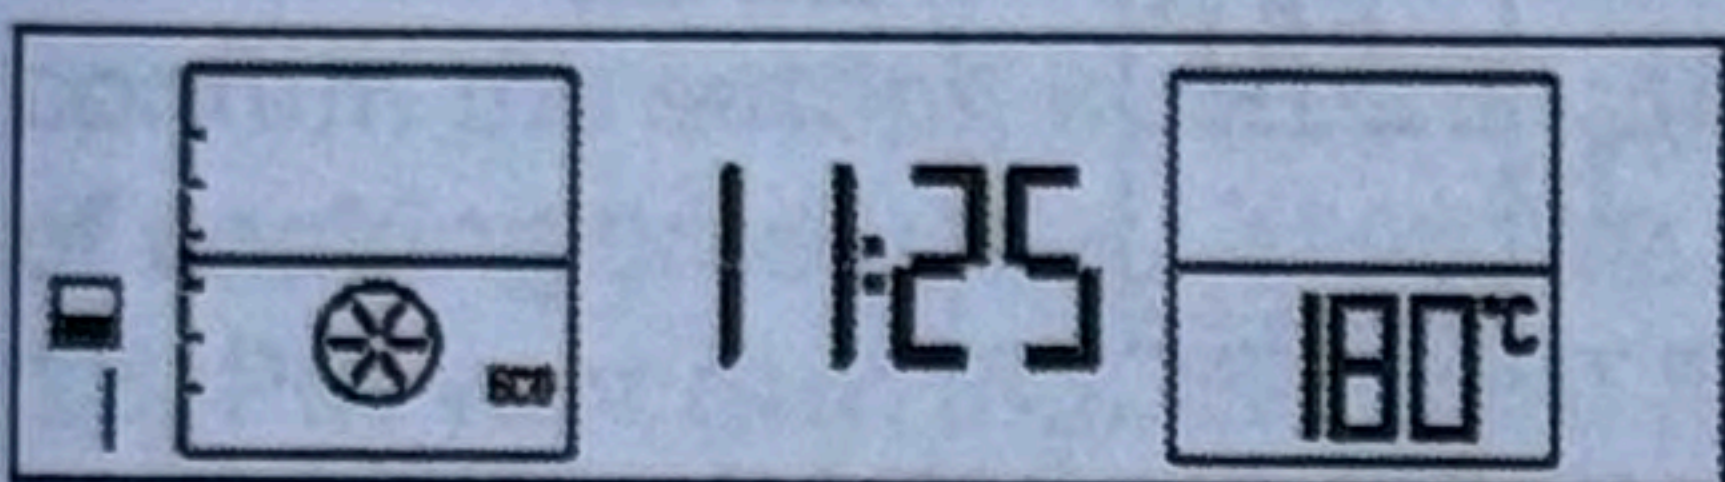
Oven will heat up to the adjusted temperature. All segments of the inner oven temperature symbol will turn on when the set temperature.

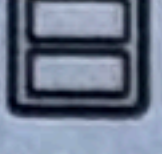
11. When the cooking process

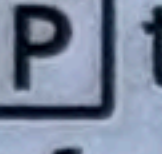
2. Switch on the oven touching the  key for two seconds.
3. When the oven is switched on, the first function special to the top section cooking will be displayed.



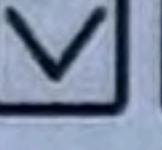

4. Touch  once to activate the bottom section of oven. Temperature setting and cooking process initiation steps for both bottom and top oven sections will iterate in the same way. (In the images, the bottom oven is shown as selected.)

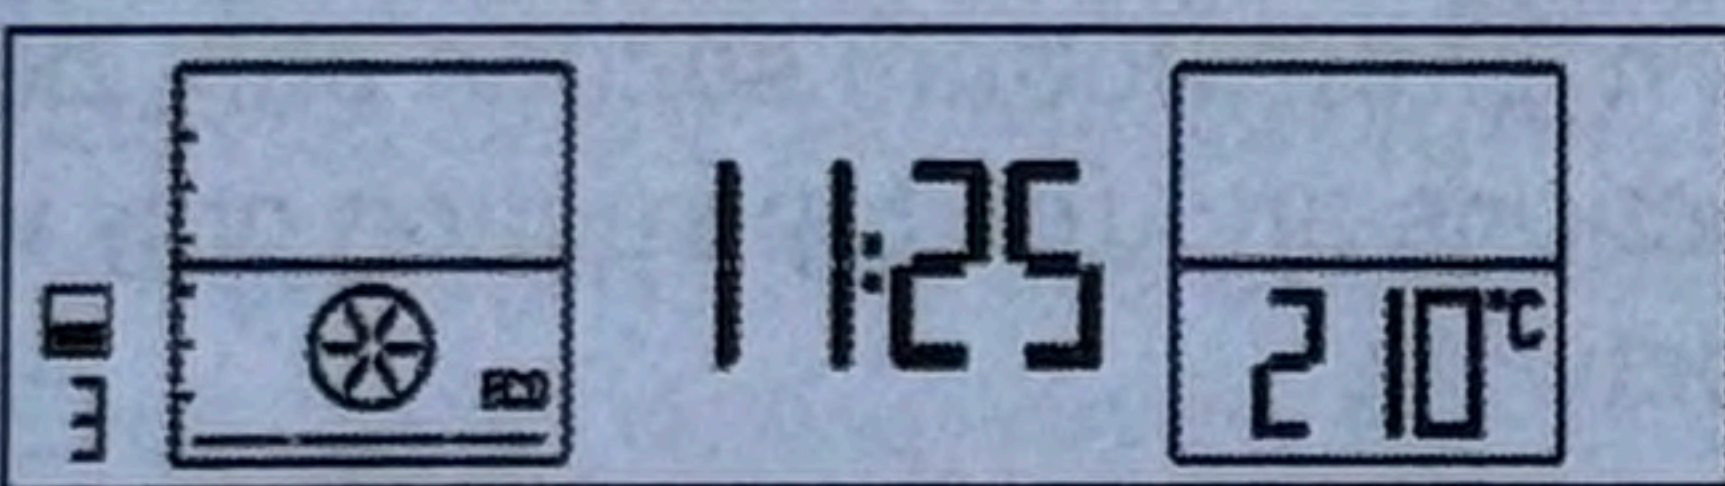


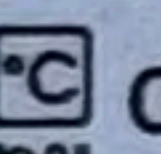
Each time you touch , the bottom section only, both bottom and top sections and the top section only will be activated respectively.

5. Touch  to enter the display for setting the operating function.

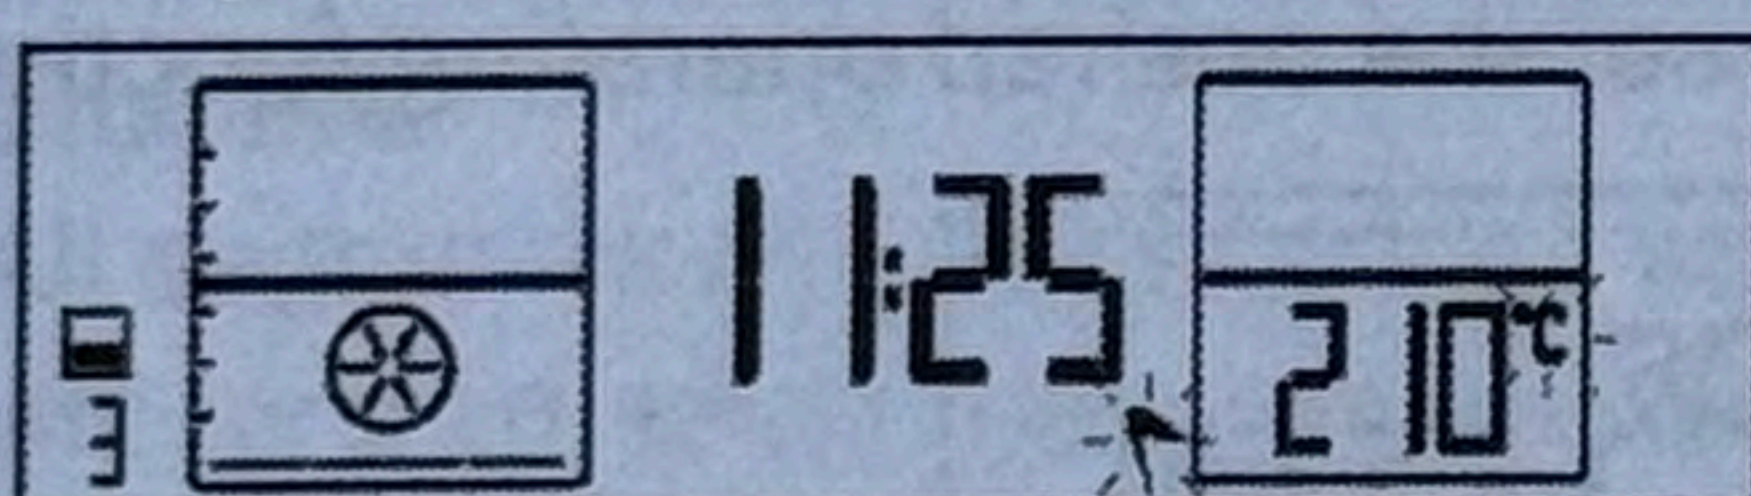
The relevant function number will flash on the display.

 

6. Touch   to set the desired operating function.

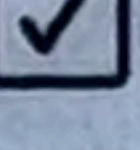


7. If you want to change the temperature, touch  once to reach the temperature display.

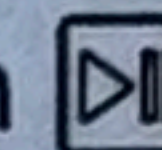
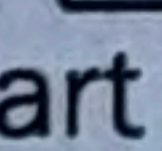
°C symbol will flash on the display.

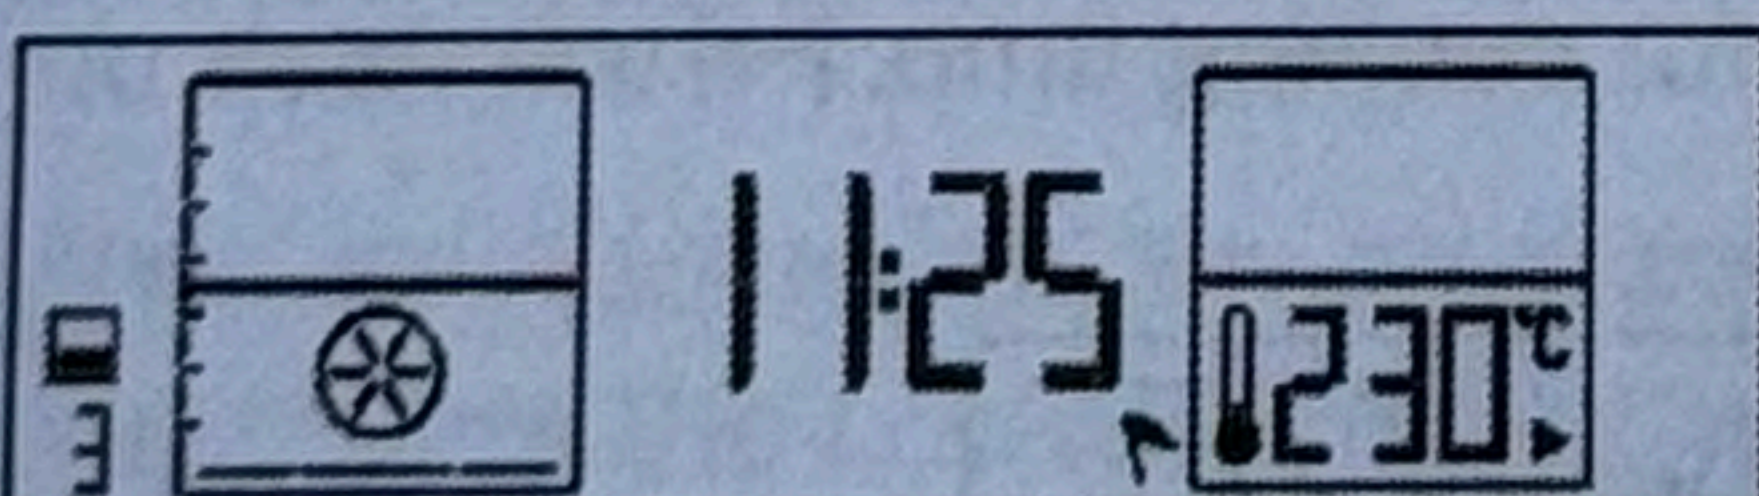


8. Touch   to set the desired temperature.

When the desired value is reached, touch  to confirm temperature.


9. Put your dish into the oven and close the door.

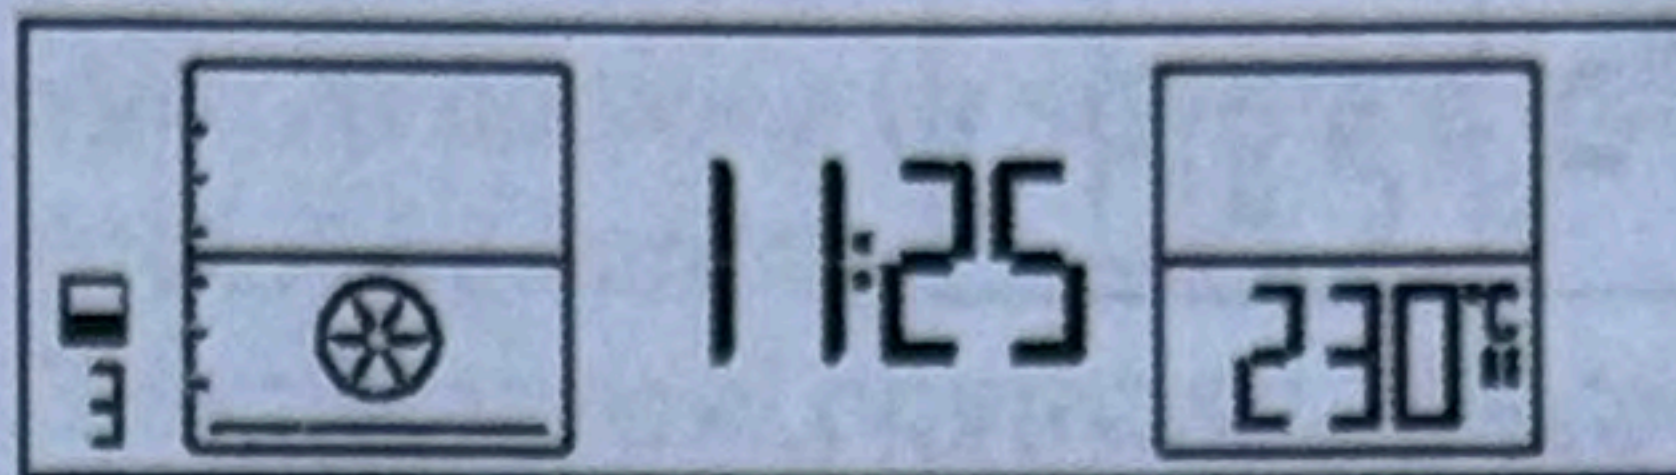
10. If cooking function and temperature values are suitable, touch  for two seconds to start cooking. Cooking will start and  will appear on the display.



Oven will heat up to the adjusted temperature. All segments of the inner oven temperature symbol will turn on when the oven reaches the set temperature.

11. When the cooking process is completed touch

-  key again for two seconds to end the cooking.



WARNING: When using only the top or bottom section for cooking, keep the unused section empty as it will get hot.

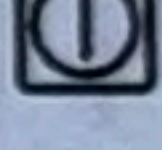
Cooking by setting the cooking time;

You can make your oven switch off automatically at the end of cooking time by selecting the temperature and function specific to your meal and setting the cooking time.

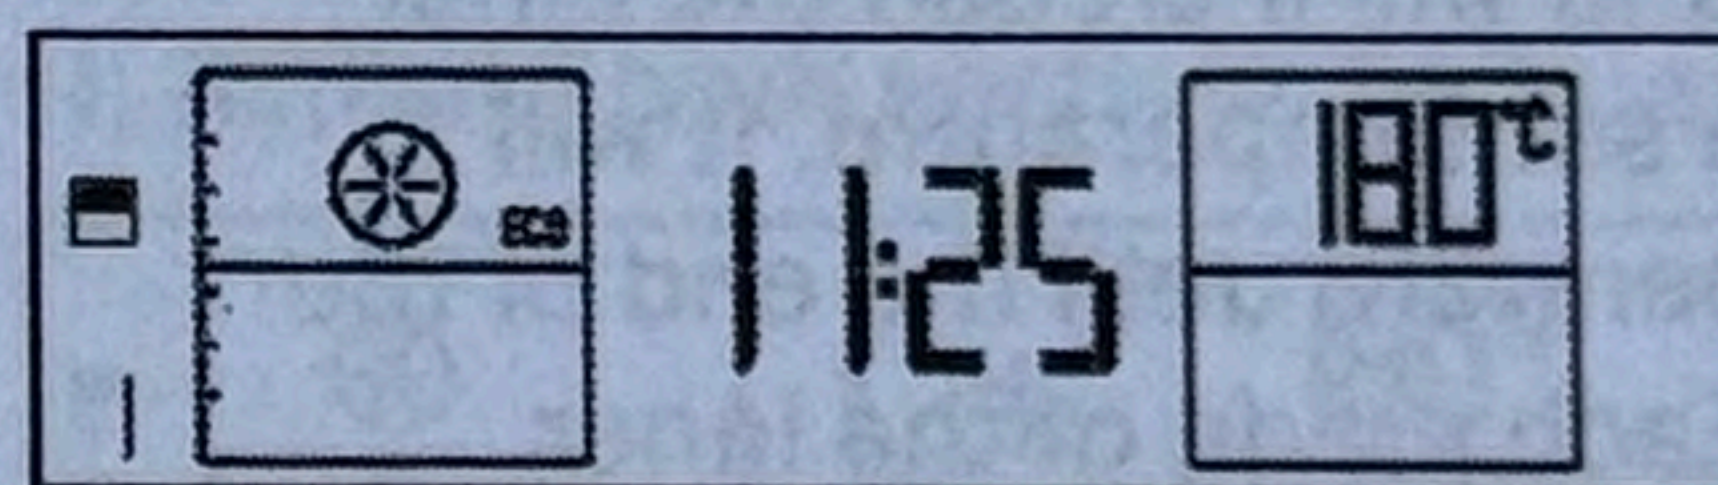
Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

 
1. Place the middle section plate in its housing found between the 3rd and 4th rack guides.

If the middle section plate is not placed, the oven timer will operate as a whole single section.

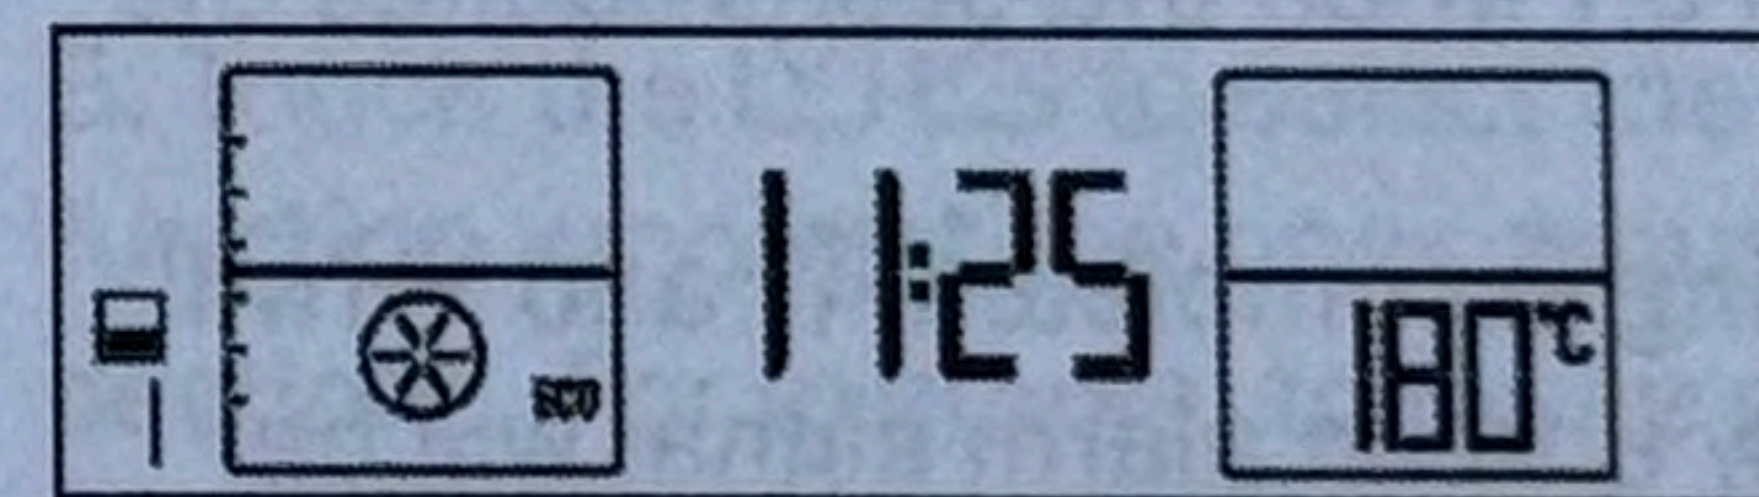
2. Switch on the oven touching the  key for two seconds.

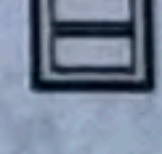
3. When the oven is switched on, the first function special to the top section cooking will be displayed.

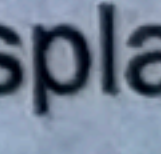


4. Touch  once to start the bottom section of oven.

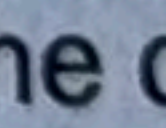
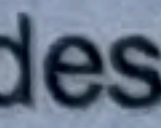
Temperature setting and cooking process initiation steps for both bottom and top oven sections will iterate in the same way. (In the images, the bottom oven is shown as selected).

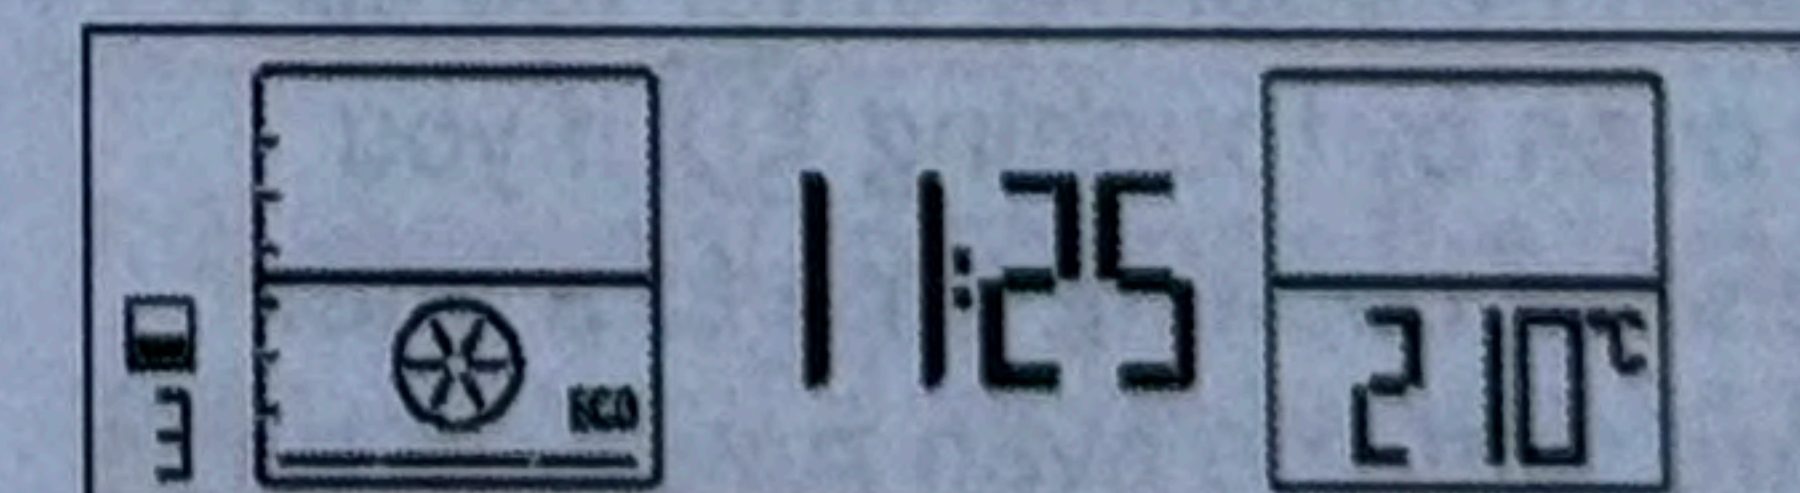


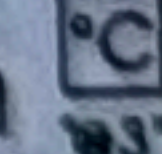
Each time you touch , the bottom section only, both bottom and top sections and the top section only will be activated respectively.

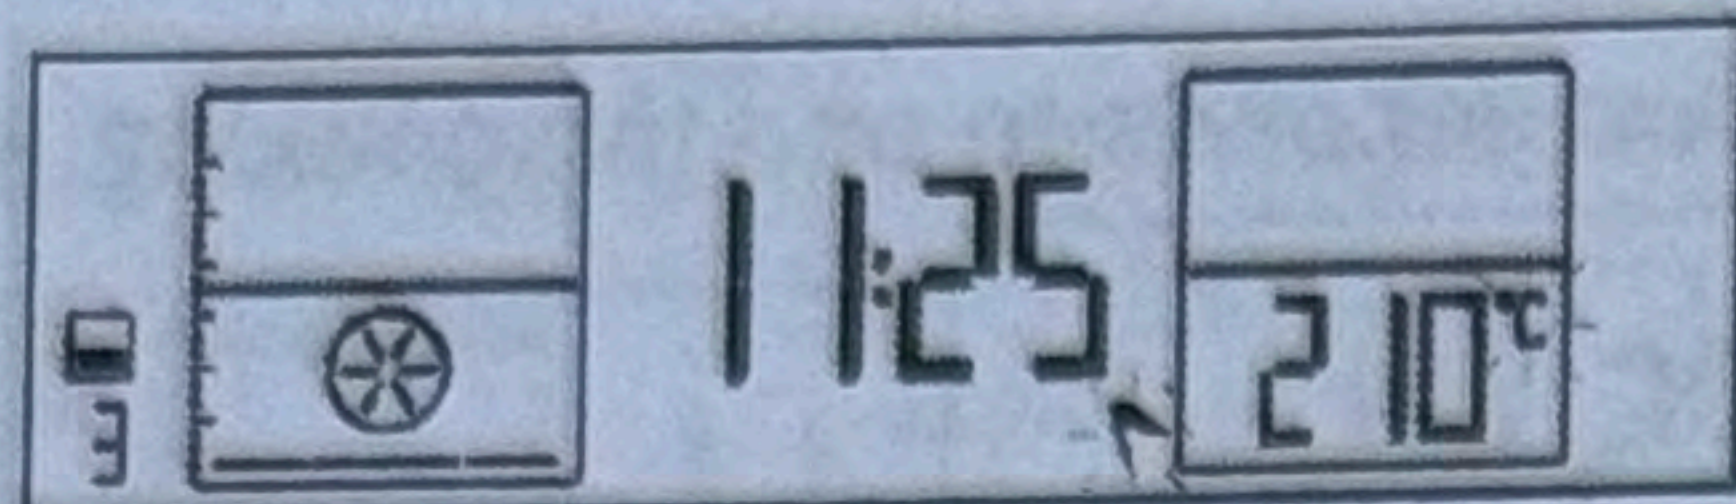
5. Touch  to enter the display for setting the operating function.

The relevant function number will flash on the display.

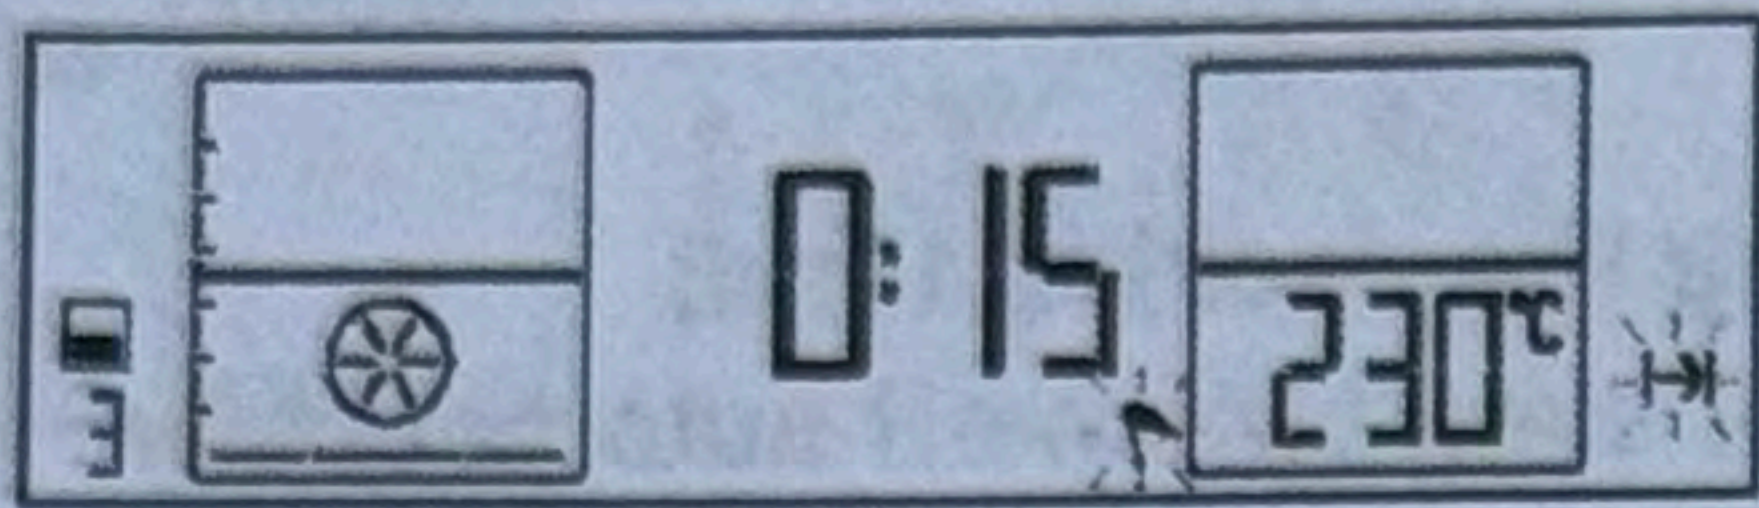
6. Touch   to set the desired operating function.



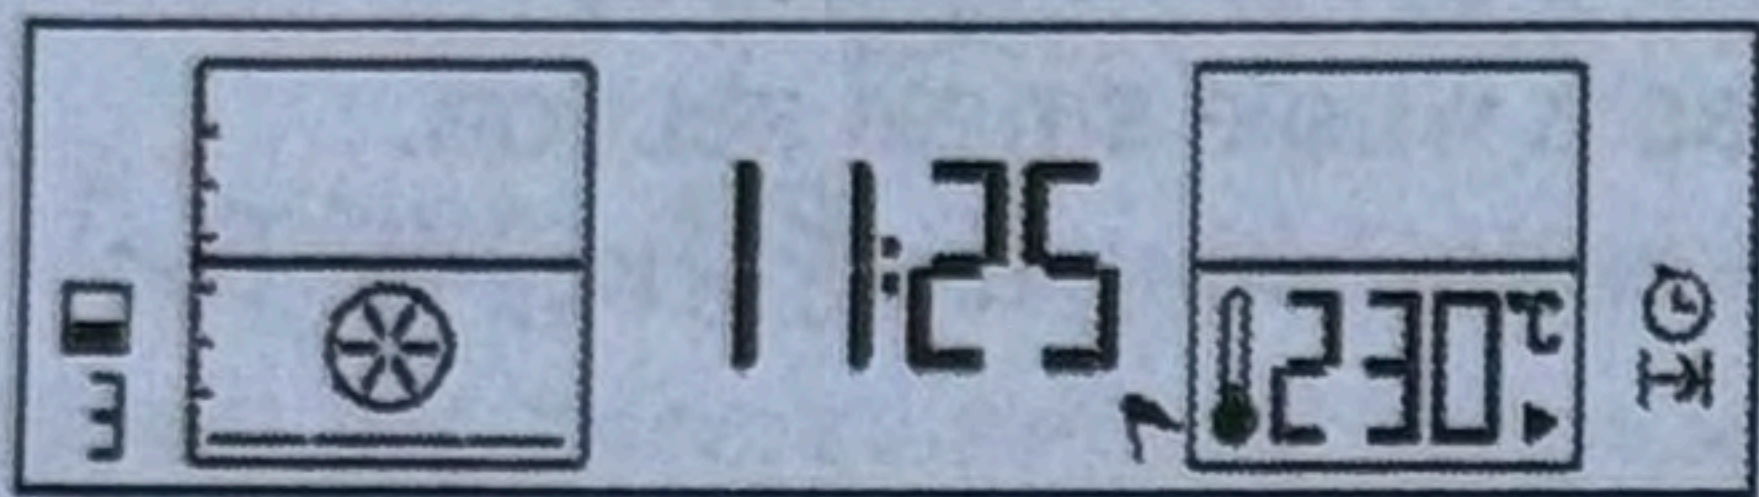
7. If you want to change the temperature, touch  once to reach the temperature display. °C symbol will flash on the display



8. Touch \checkmark \wedge to set the desired temperature. When the desired value is reached, touch \checkmark to confirm the temperature.
9. Touch \odot once for cooking time. $\rightarrow|$ will flash on the display.



10. Touch the \checkmark \wedge to set the desired cooking time and confirm the \checkmark . Once the cooking time is set, $\rightarrow|$ \odot will be displayed continuously.
11. Put your dish into the oven and close the door.
12. If cooking function, temperature and time values are suitable, touch \blacktriangleright for 2 seconds to start cooking. Cooking will start and \blacktriangleright will appear on the display.

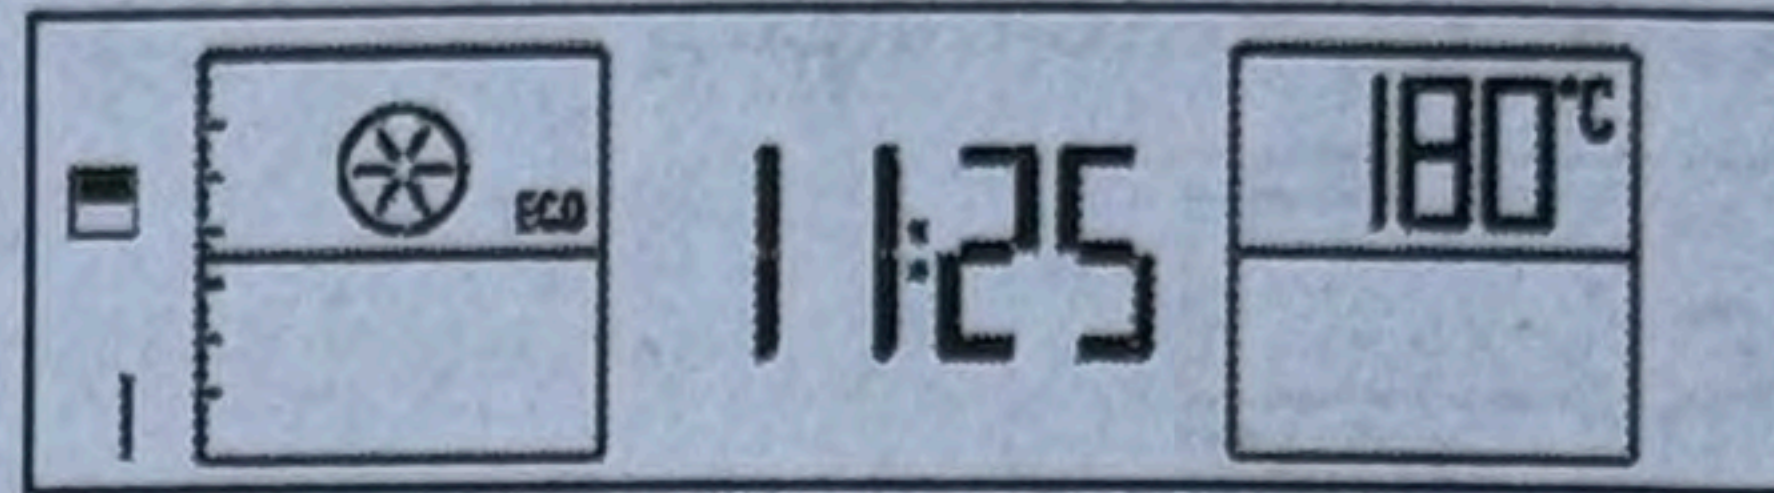


Your oven will readily start operating in the selected function and will increase the inner temperature to the set temperature. It will maintain this temperature until the end of the set cooking time. Each grade of the inner temperature symbol will be lit as inner temperature reaches to the set temperature. Additional active heaters and recommended tray position appear in the Function display. All segments of the inner oven temperature symbol \equiv will turn on when the oven reaches the set temperature.

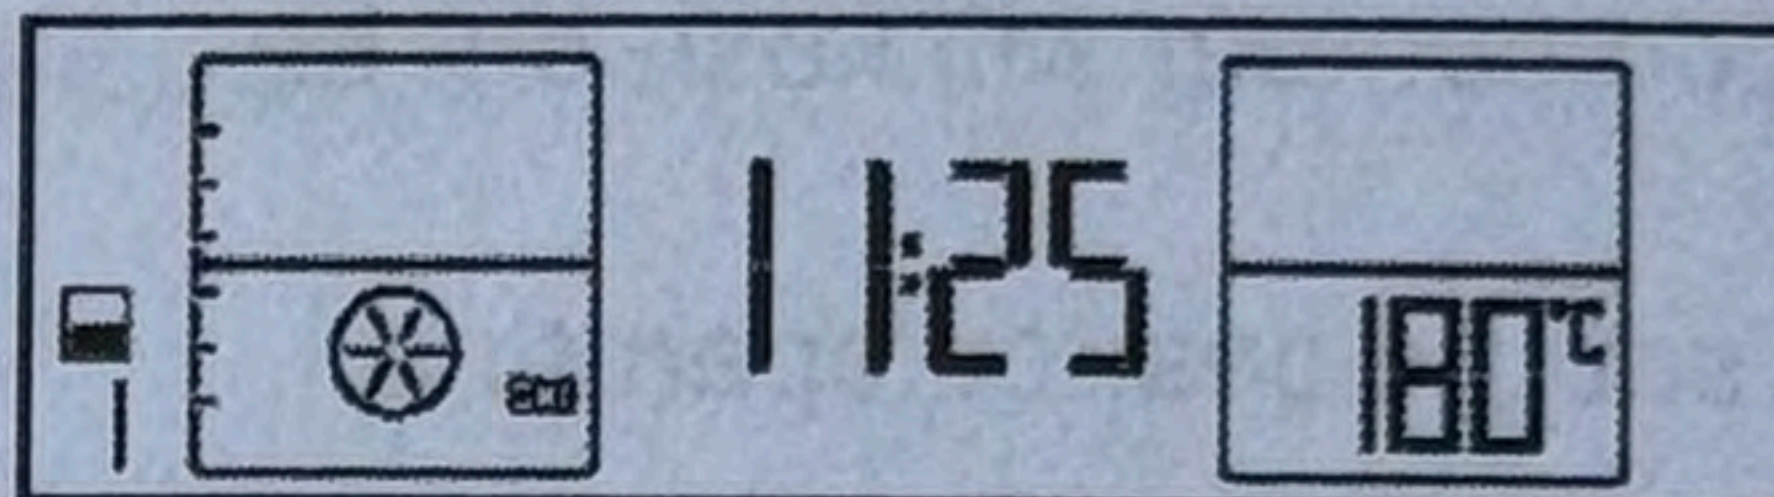
13. After the cooking is completed, \blacktriangle and $\rightarrow|$ will flash on the display and an alarm signal will be heard.
14. To stop the alarm signal, just touch any key. The oven will switch off automatically.
15. If you want the oven to continue operating, press \blacktriangleright for 2 seconds. The oven will continue cooking for an indefinite period of time. If you want to cancel the setting after performing the cooking setting by adjusting the cooking time you will need to reset the cooking time. You can also switch off the oven by touching \odot if you want. Setting the end of cooking time to a later time; You can ensure that the oven runs and turns off automatically by setting temperature and operating function specific to your meal, the cooking time and end of cooking to a later time,

manually controlling without setting the cooking time. Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

- Place the middle section plate in its housing found between the 3rd and 4th rack guides. If the middle section plate is not placed, the oven timer will operate as a whole single section.
- Switch on the oven touching the \odot key for two seconds.
- When the oven is switched on, the first function special to the top section cooking will be displayed.

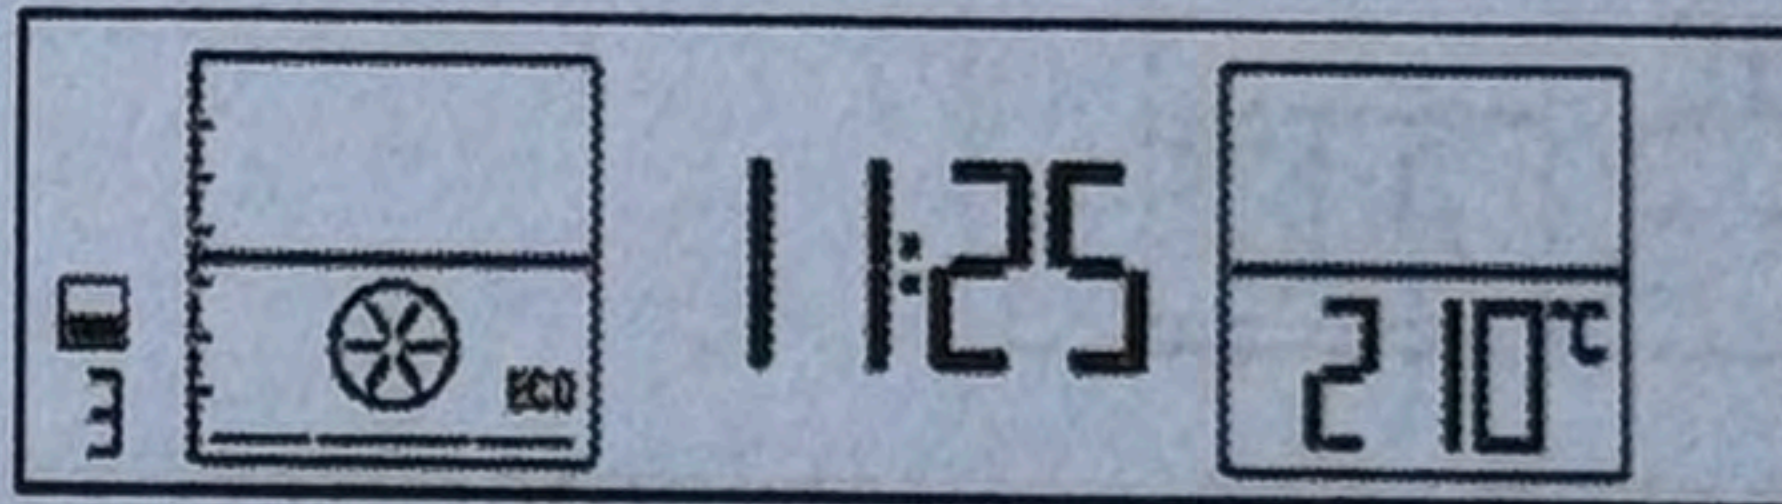


Touch \equiv once to activate the bottom section of oven. \blacktriangle will appear next to the active oven section. Temperature setting and cooking process initiation steps for both bottom and top oven sections will iterate in the same way. (In the images, the bottom oven is shown as selected).

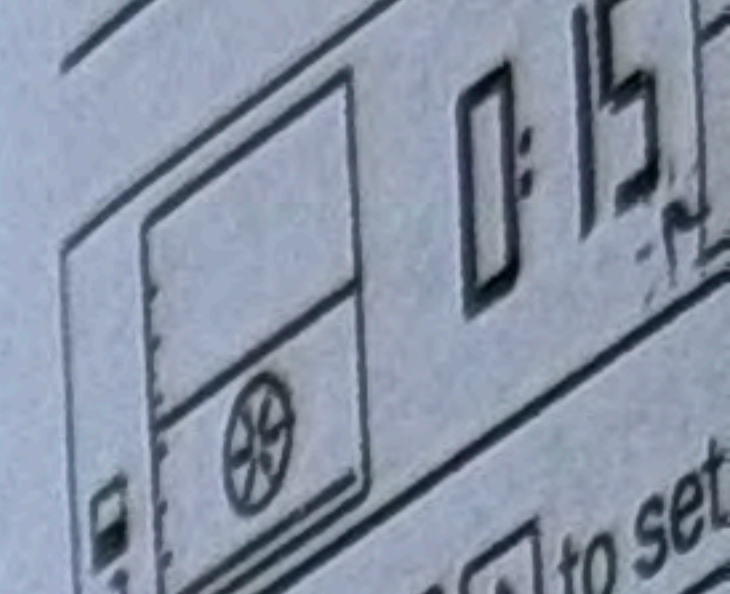


Each time you touch \equiv the bottom section only, both bottom and top sections and the top section only will be activated respectively.

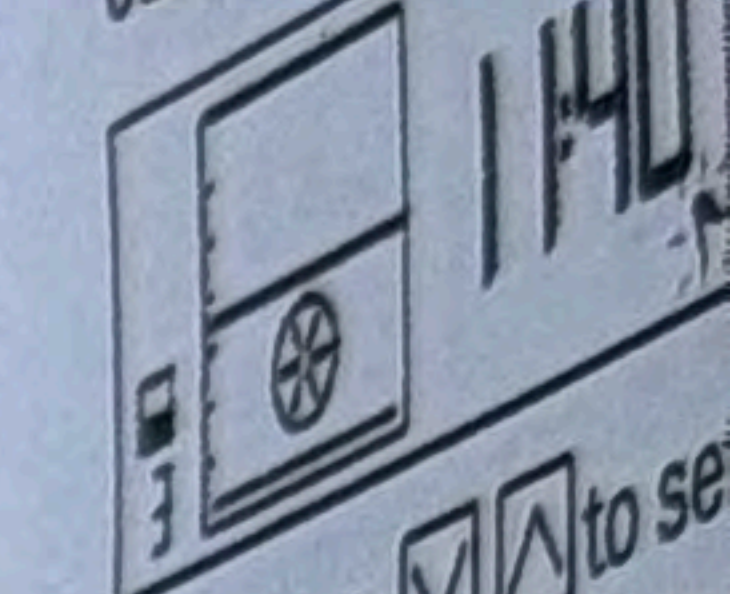
5. Touch P to enter the display for setting the operating function. The relevant function number will flash on the display.
6. Touch \checkmark \wedge to set the desired operating function.



7. If you want to change the temperature, touch °C once to reach the temperature display. °C symbol will flash on the display.
8. Touch \checkmark \wedge to set the desired temperature. When the desired value is reached, touch \checkmark to confirm temperature.
9. Touch \odot once for cooking time. $\rightarrow|$ will flash on the display.



10. Touch \checkmark \wedge to set confirm by touching \checkmark set. $\rightarrow|$ will be displayed.
11. Touch \odot twice at cooking time. $\rightarrow|$ will flash.



12. Touch \checkmark \wedge to set confirm the setting by of cooking time is set.
13. Put your dish into
14. If cooking function time values are suitable start cooking.

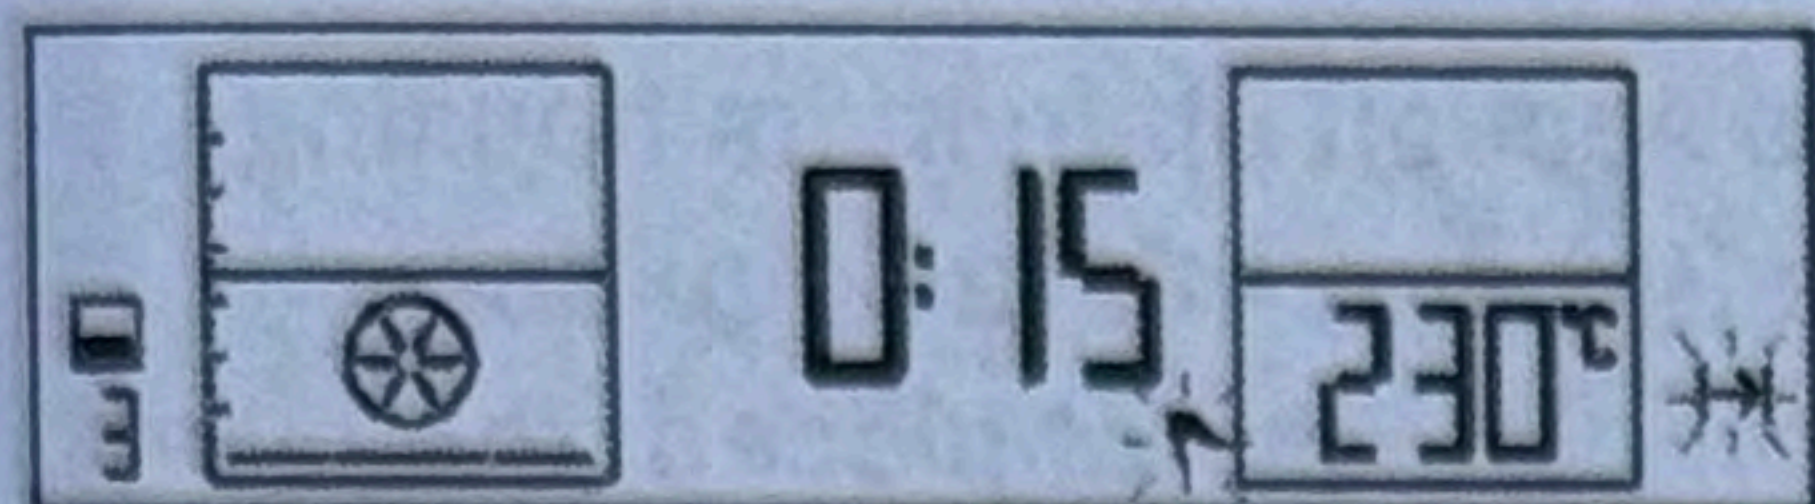
\blacktriangle will appear on the automatically calculating cooking by deducting of cooking time you heat up to the set temperature until the Each grade of the inner lit as inner temperature. Addition recommended tray position display. The oven lamp process.

All segments of the inner will turn on when the temperature.

15. After the cooking flash on the display.
16. To stop the alarm will switch off automatically.
17. If you want the oven \blacktriangleright for 2 seconds. The an indefinite period

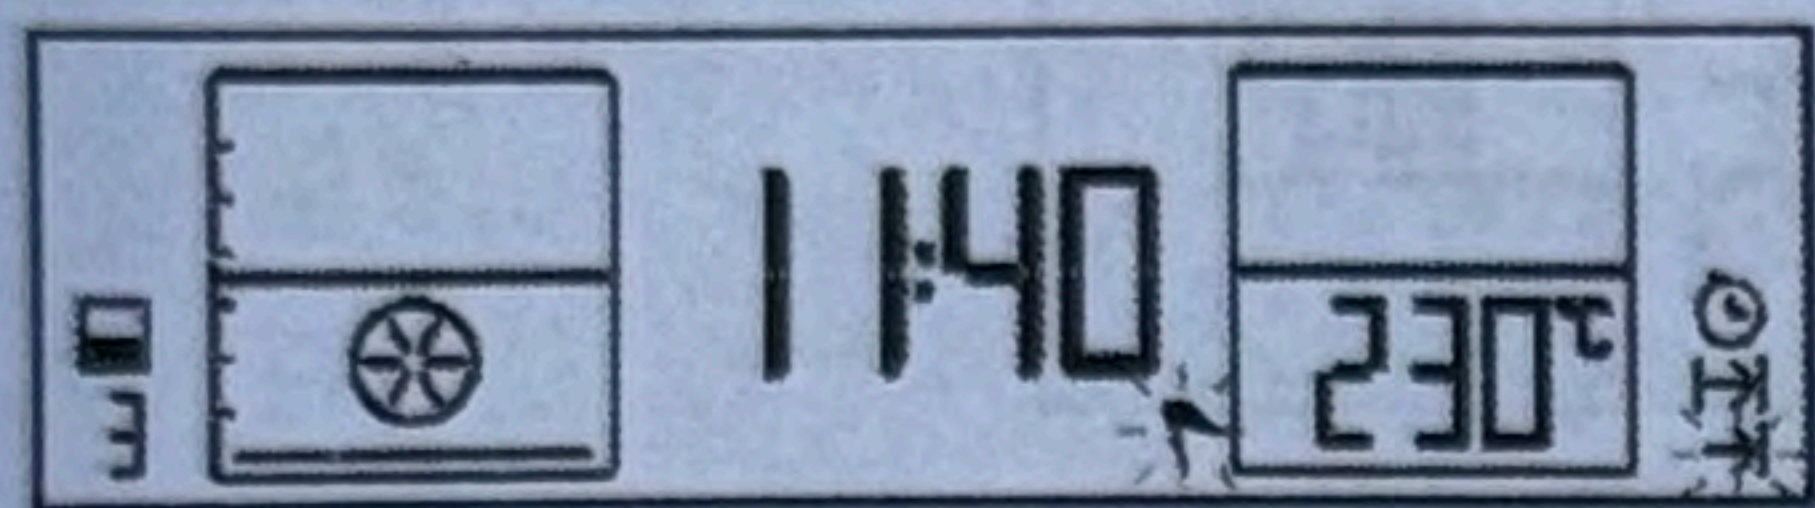
If you want to cancel performing the cooking time, you will time. You can also switch \odot if you want.

Page _ 19



10. Touch to set the desired cooking time and confirm by touching . Once the cooking time is set, will be displayed continuously.

11. Touch twice at short intervals for the end of cooking time. will flash on the display.



12. Touch to set the end of cooking time and confirm the setting by touching . Once the end of cooking time is set, will be displayed.

13. Put your dish into the oven and close the door.

14. If cooking function, temperature, time and end time values are suitable, touch for 2 seconds to start cooking.

will appear on the display. Oven timer automatically calculates the startup time for cooking by deducting the cooking time from the end of cooking time you have set. When the cooking startup time comes, the selected cooking function will be activated, will disappear and the oven will heat up to the set temperature. It will maintain this temperature until the end of the set cooking time. Each grade of the inner temperature symbol will be lit as inner temperature reaches to the set temperature. Additional active heaters and recommended tray position appear in the Function display. The oven lamp is lit during the cooking process.

All segments of the inner oven temperature symbol will turn on when the oven reaches the set temperature.

15. After the cooking is completed, and will flash on the display and an alarm will sound.

16. To stop the alarm, just touch any key. The oven will switch off automatically.

17. If you want the oven to continue operating, press for 2 seconds. The oven will continue cooking for an indefinite period of time.

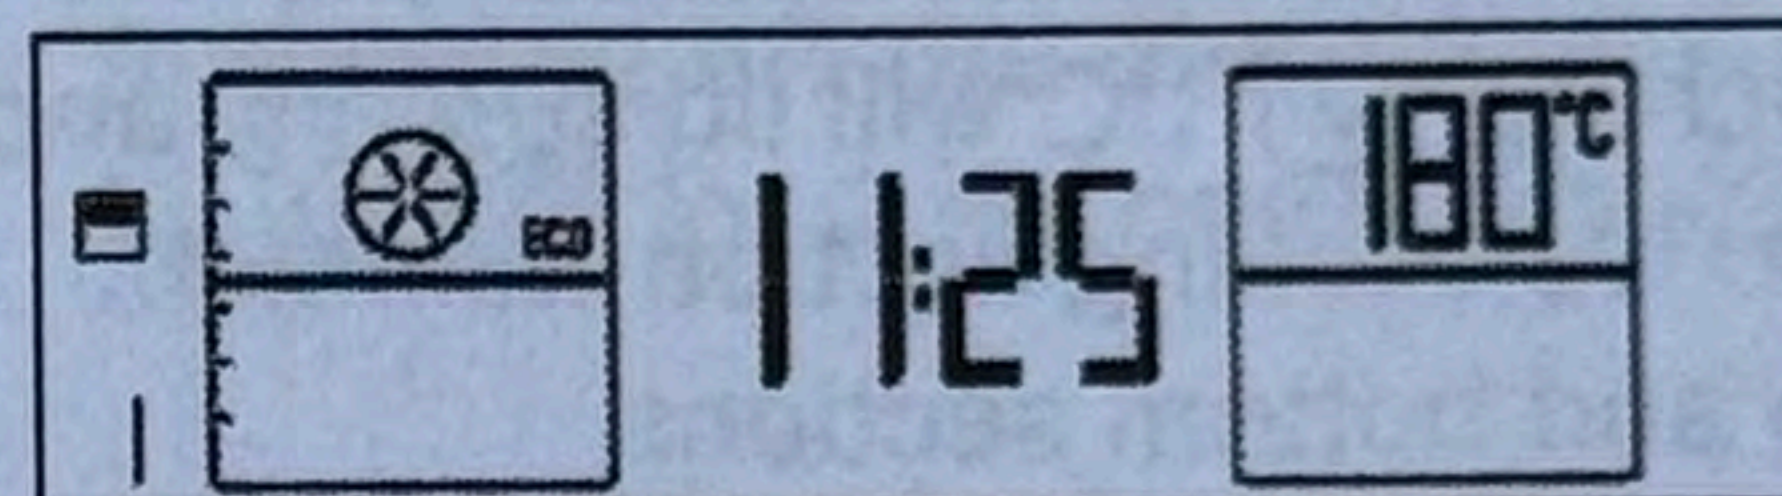
If you want to cancel the programme after performing the cooking setting by adjusting the cooking time, you will need to reset the cooking time. You can also switch off the oven by touching if you want.

Using the top and bottom sections of the oven simultaneously

Manual cooking by selecting temperature and operating function

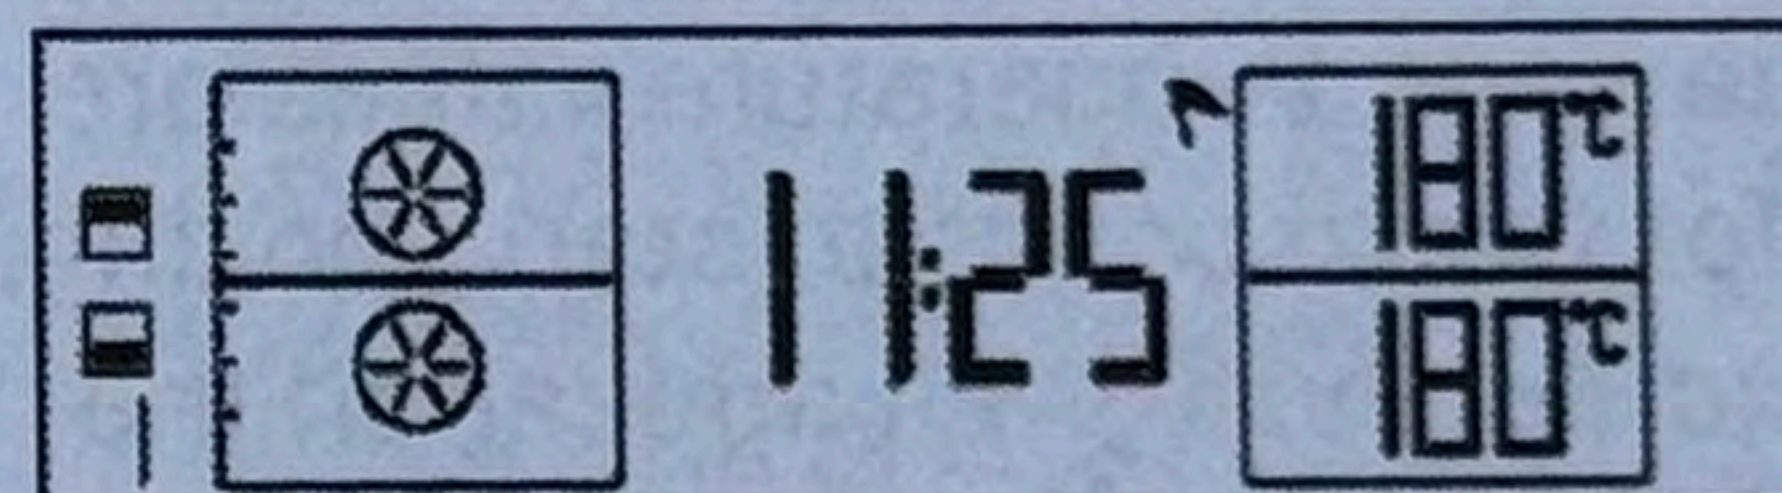
During manual operation, the oven will operate regardless of the cooking time after the function and temperature selection is made. The oven will not switch off automatically at the end of the cooking time. Cooking should be ended by the user. Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

1. Place the middle section plate in its housing found between the 3rd and 4th rack guides. If the middle section plate is not placed, the oven timer will operate as a whole single section.
2. Switch on the oven touching the key for two seconds.
3. When the oven is switched on, the first function special to the top section cooking will be displayed.



Each time you touch , the bottom section only, both bottom and top sections and the top section only will be activated respectively.

4. Activate both sections by touching twice.

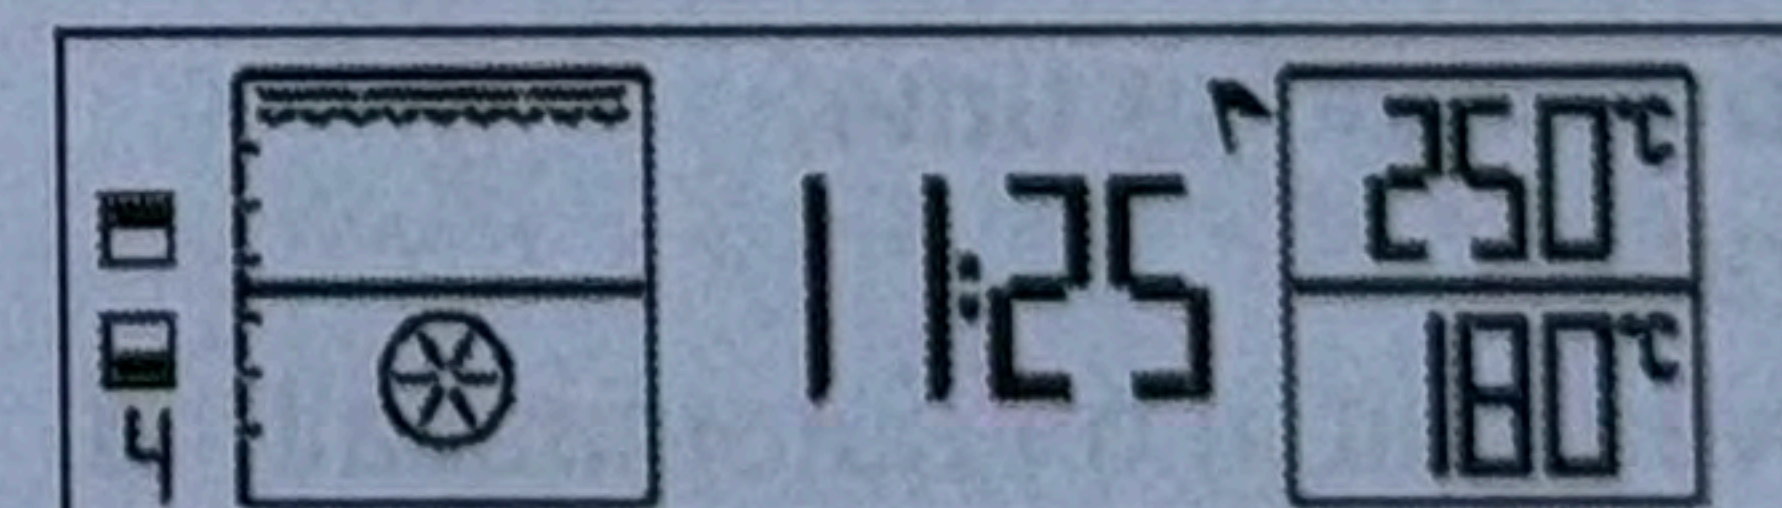


5. Touch to enter the display for setting the operating function.

The relevant function number will flash on the display.

6. Touch the to select the appropriate cooking function amongst the ones adjusted for both oven sections. For example, to make grill in the top and cook pastry in the bottom section you can select Grill & Fan supported function.

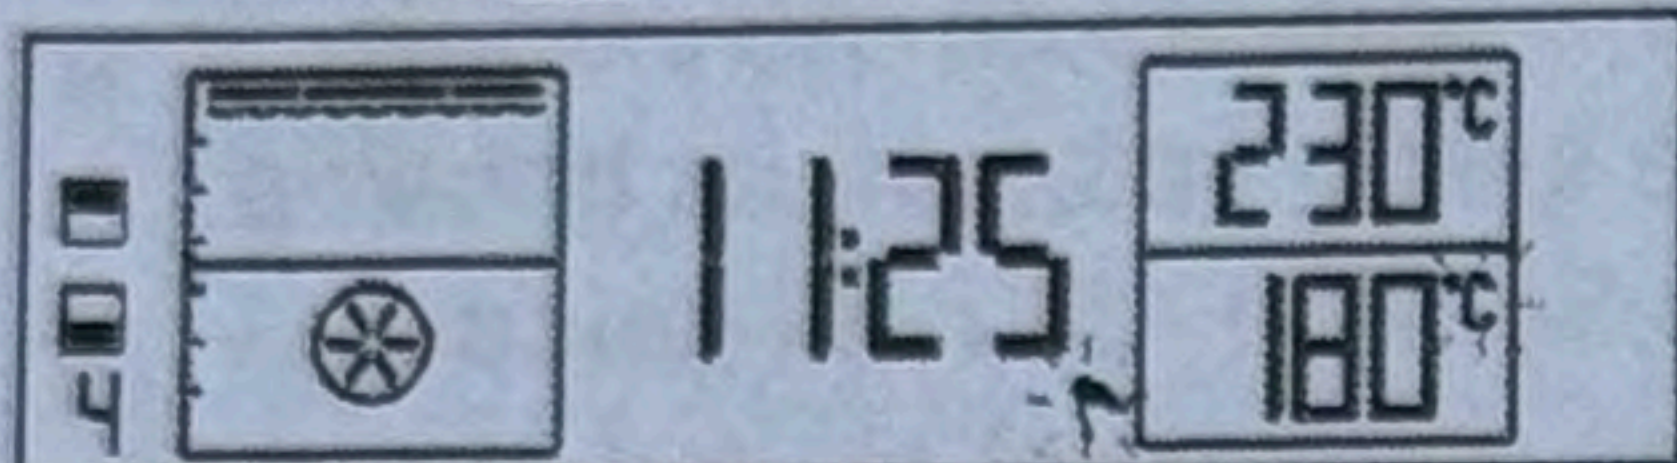
After the function is selected, "Temperature" and "Cooking time" can be adjusted separately for each oven section. and °C symbols of the active cooking sections for this settings will flash.



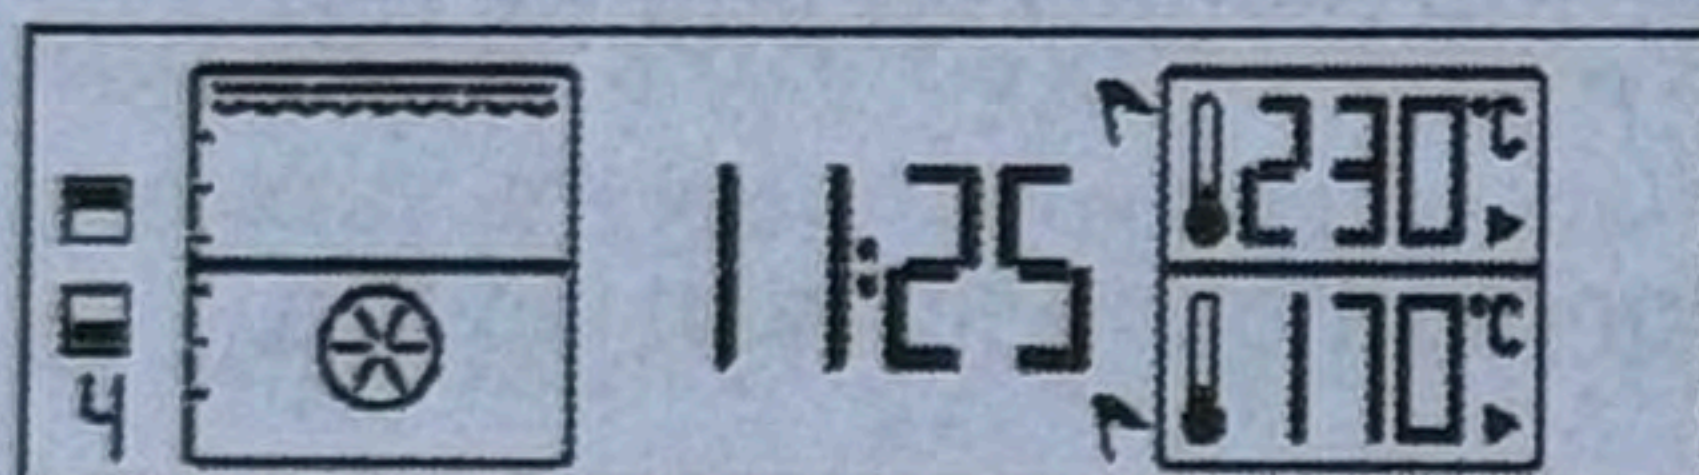
7. If you want to change the temperature of top oven, touch once to access the temperature display of top oven. and °C will flash on the temperature display of the selected oven section.



8. Touch to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and symbol of the active cooking section will flash.
9. To change the temperature of the bottom oven, activate the bottom oven's temperature display touching . Bottom oven's symbol will flash.

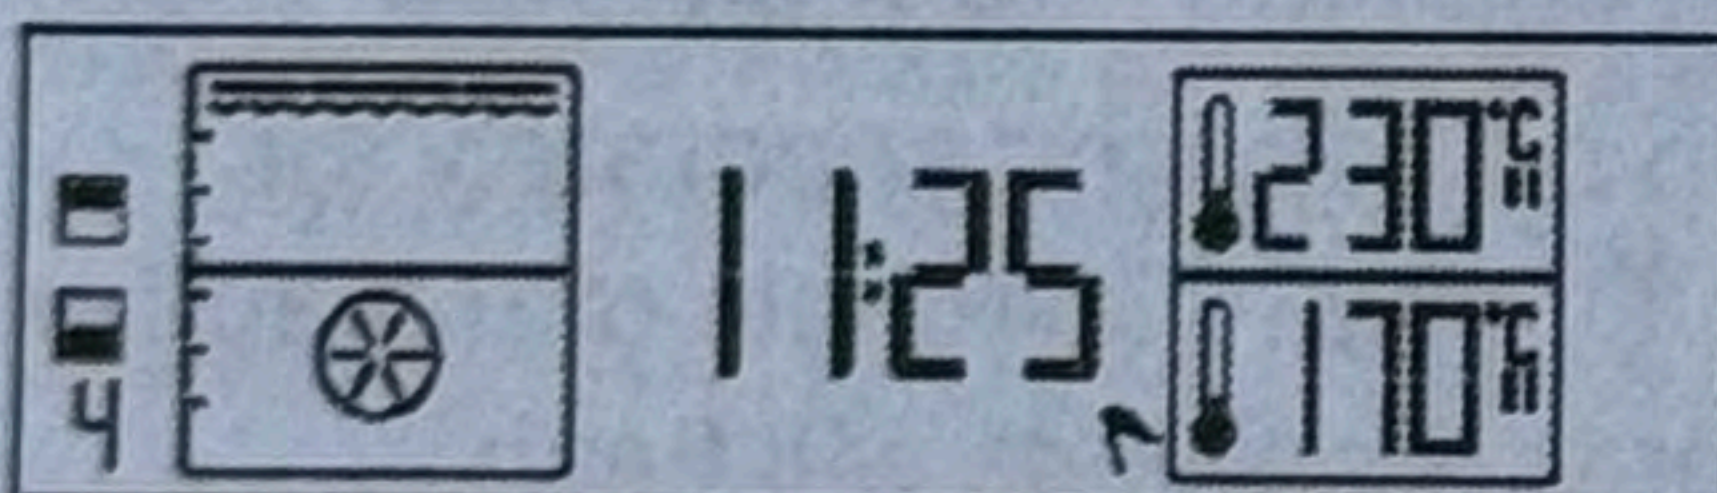


10. Touch once to access the temperature display of bottom oven. °C and will flash on the temperature display of the selected oven section.
11. Touch to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and symbol of the active cooking section will flash. While using the top and bottom sections simultaneously, if you want to change temperature setting, the difference between the sections cannot be more than 80 °C. Because the sections will be affected from each others temperature..
12. Put your dish into the oven and close the door.
13. If cooking function and temperature values are suitable, touch for two seconds to start cooking. Cooking will start and and will appear on the display of the top and bottom oven sections.



All segments of the inner oven temperature symbol will turn on when the oven reaches the set temperature.

14. When the cooking process is completed touch key again for two seconds to end cooking..



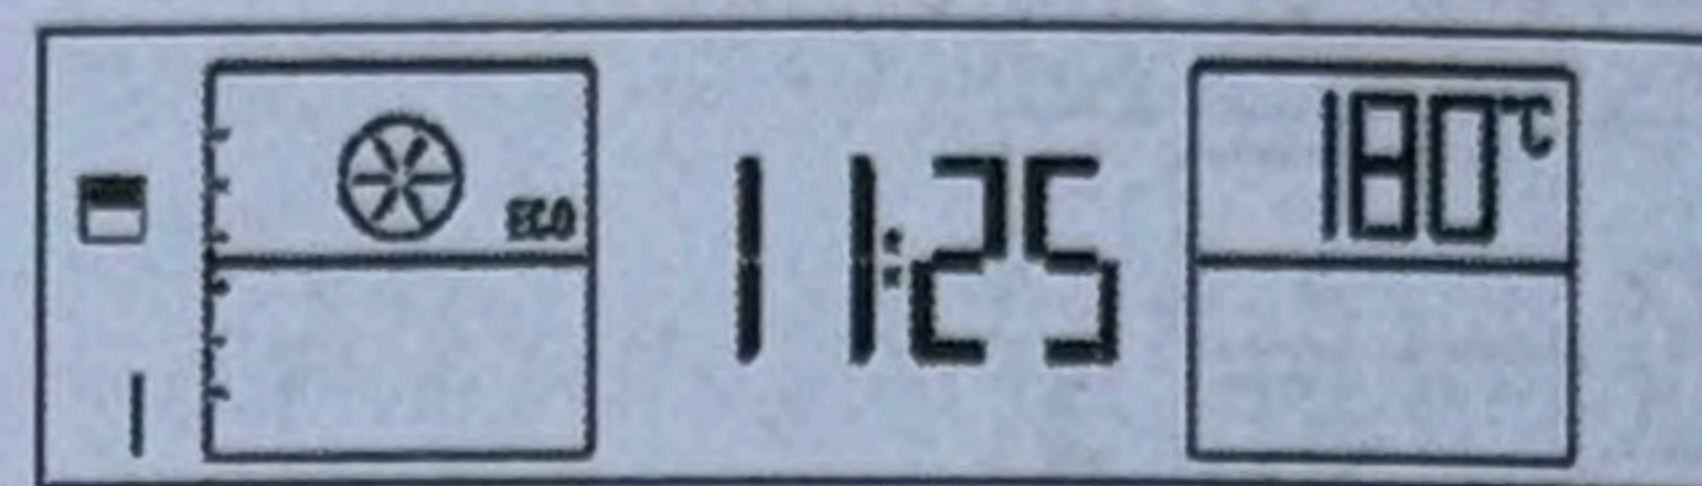
Cooking by setting the cooking time;

Semi-automatic operation

You can make your oven switch off automatically at the end of cooking time by selecting the temperature and function specific to your meal and setting the cooking time.

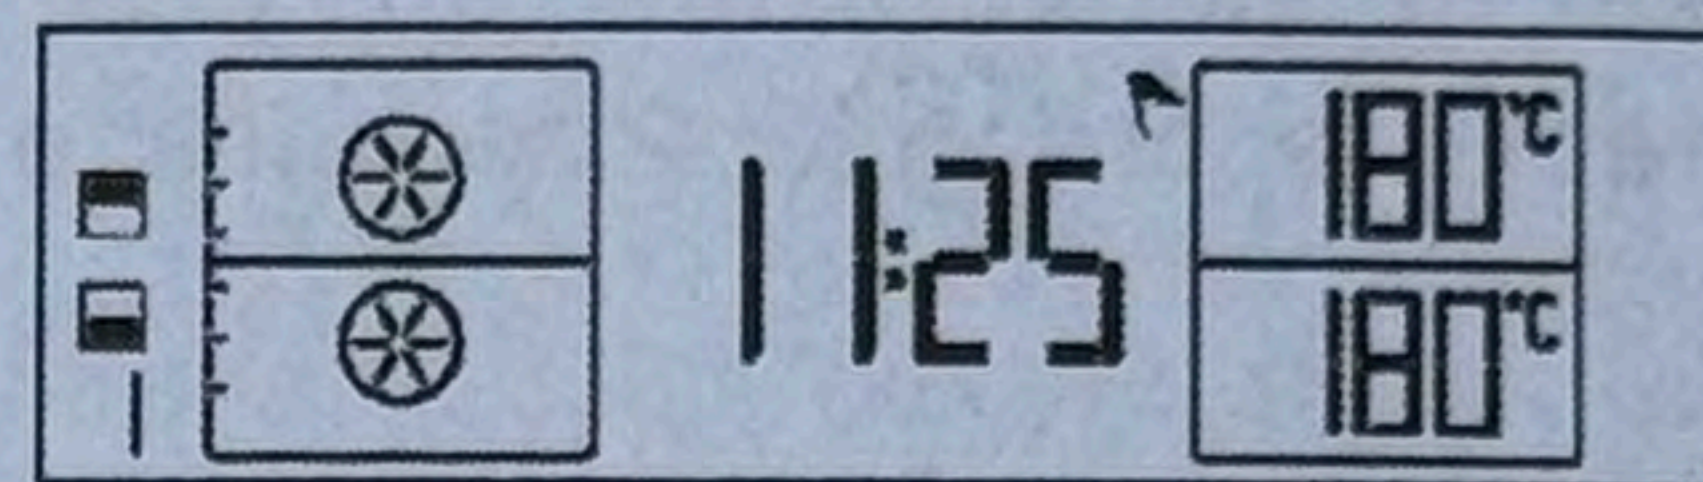
Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

1. Place the middle section plate in its housing found between the 3rd and 4th rack guides. If the middle section plate is not placed, the oven timer will operate as a whole single section.
2. Switch on the oven touching the key for two seconds.
3. When the oven is switched on, the first function special to the top section cooking will be displayed.



Each time you touch , the bottom section only, both bottom and top sections and the top section only will be activated respectively.

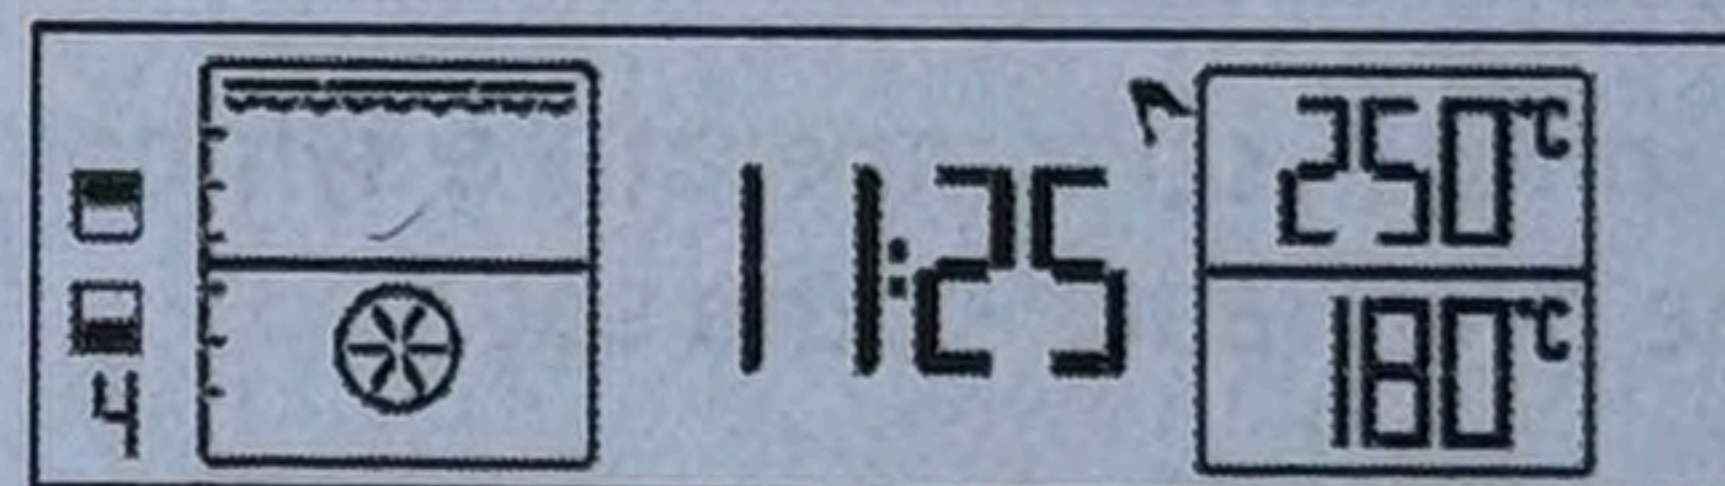
4. Activate both sections by touching twice. will appear next to each oven section.



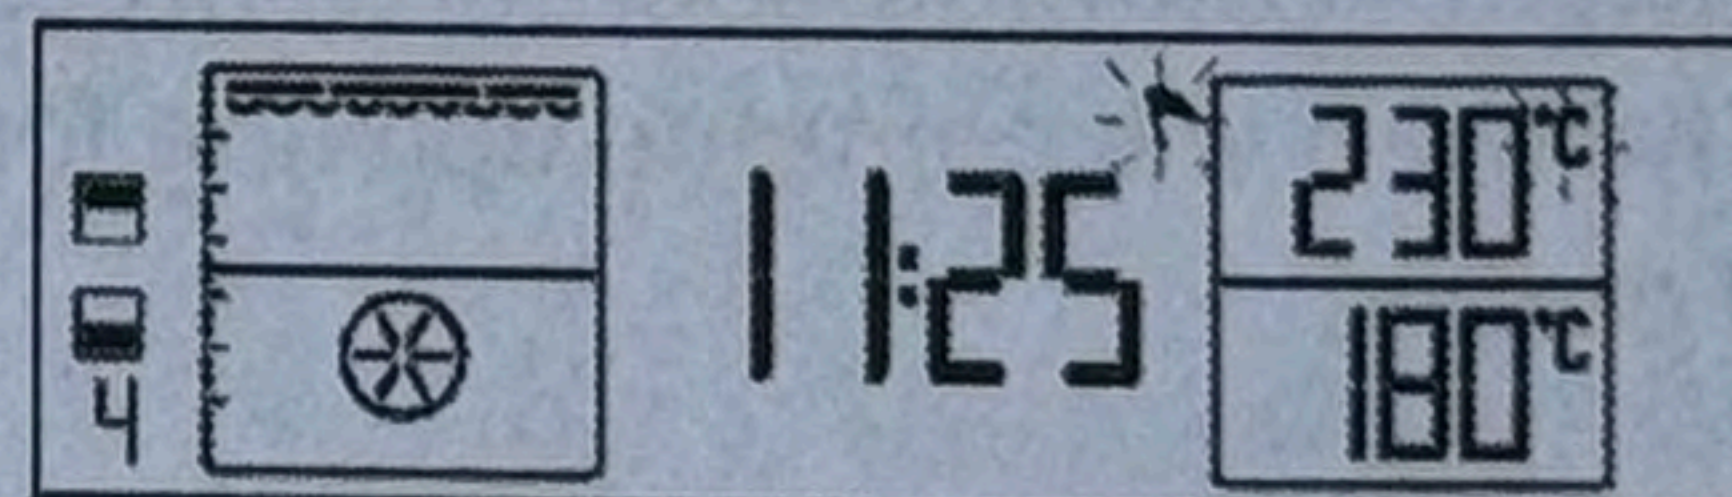
5. Touch to enter the display for setting the operating function. The relevant function number will flash on the display.

6. Touch to select the appropriate cooking function amongst the ones adjusted for both oven sections. For example, to make grill in the top and cook pastry in the bottom section you can select Grill & Fan supported function.

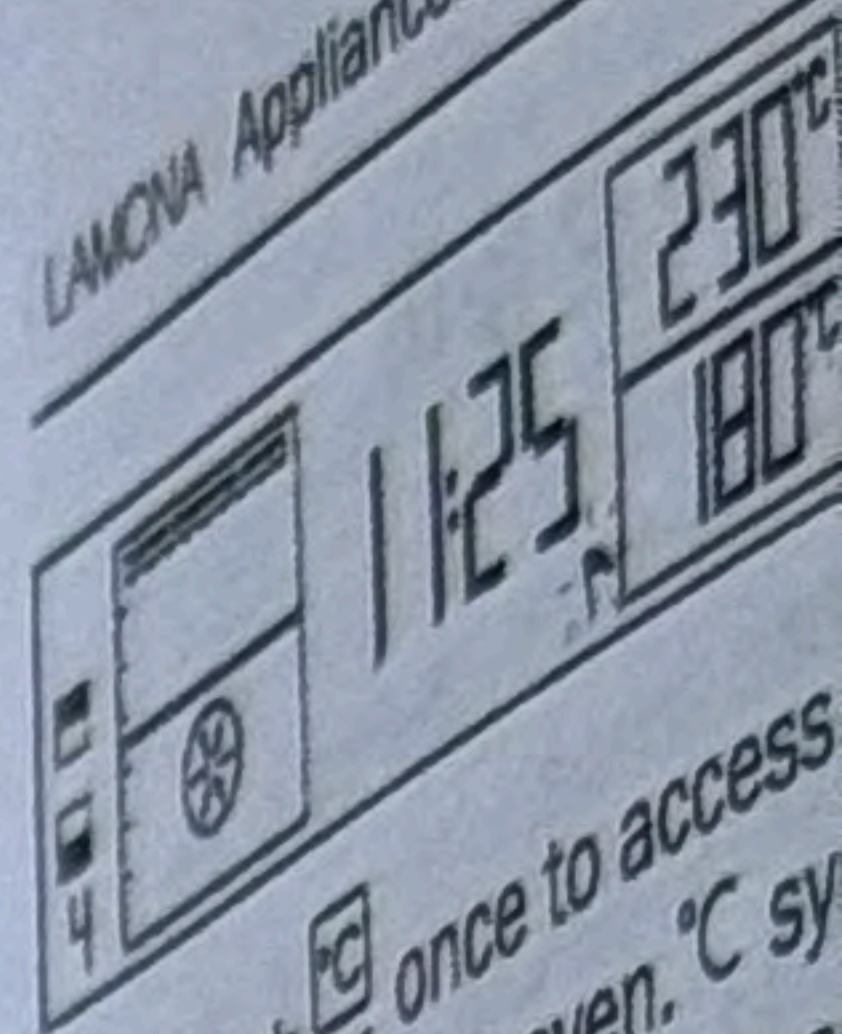
After the function is selected, "Temperature" and "Cooking time" can be adjusted separately for each oven section. For these settings symbol of the active cooking section will flash.



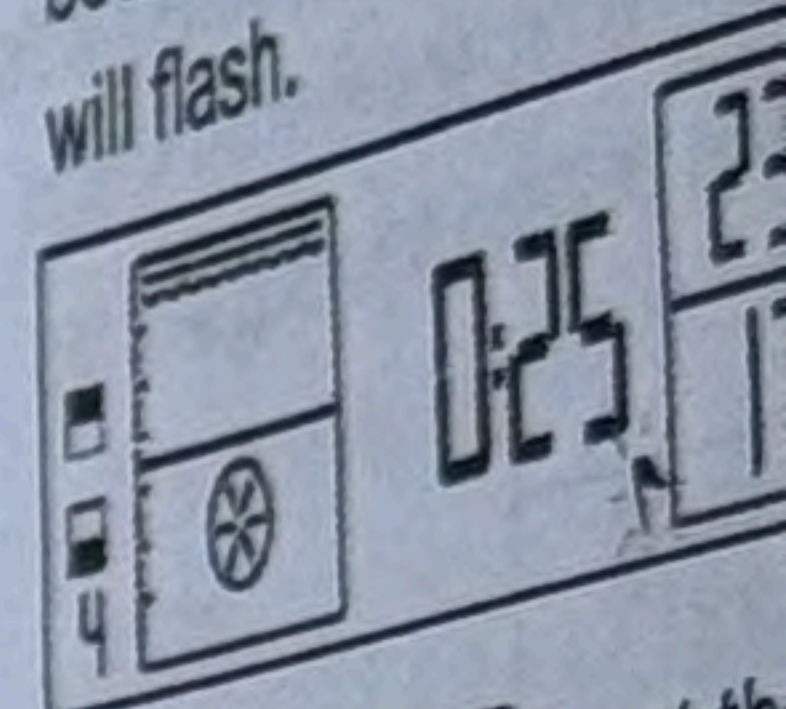
7. If you want to change the temperature of top oven, touch once to access the temperature display of top oven. °C symbol will flash on the temperature display of the selected oven section.



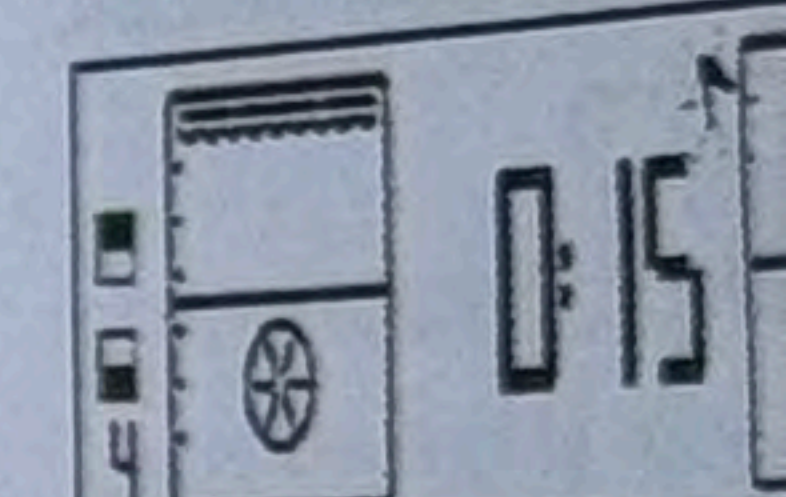
8. Touch to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and symbol of the active cooking section will flash.
9. To change the temperature of the bottom oven, activate the bottom oven's temperature display by touching . Bottom oven's symbol will flash.



10. Touch once to access the temperature display of bottom oven. °C symbol will flash on the temperature display of the selected oven section.
11. Touch to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and symbol of the active cooking section will flash. While using the top and bottom sections simultaneously, if you want to change temperature setting, the difference between the sections cannot be more than 80 °C. Because the sections will be affected from each others temperature..
12. Put your dish into the oven and close the door.
13. If cooking function and temperature values are suitable, touch for two seconds to start cooking. Cooking will start and and will appear on the display of the top and bottom oven sections.



13. Touch to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and symbol of the active cooking section will flash.
14. For the cooking time, touch for two seconds to end cooking..



15. Set the desired cooking time by touching and to set the desired cooking time of the top oven. The relevant function number will flash on the display.

16. Put your dish into the oven and close the door.
17. If cooking function and temperature values are suitable, touch for two seconds to start cooking. Cooking will start and and will appear on the display of the top and bottom oven sections.

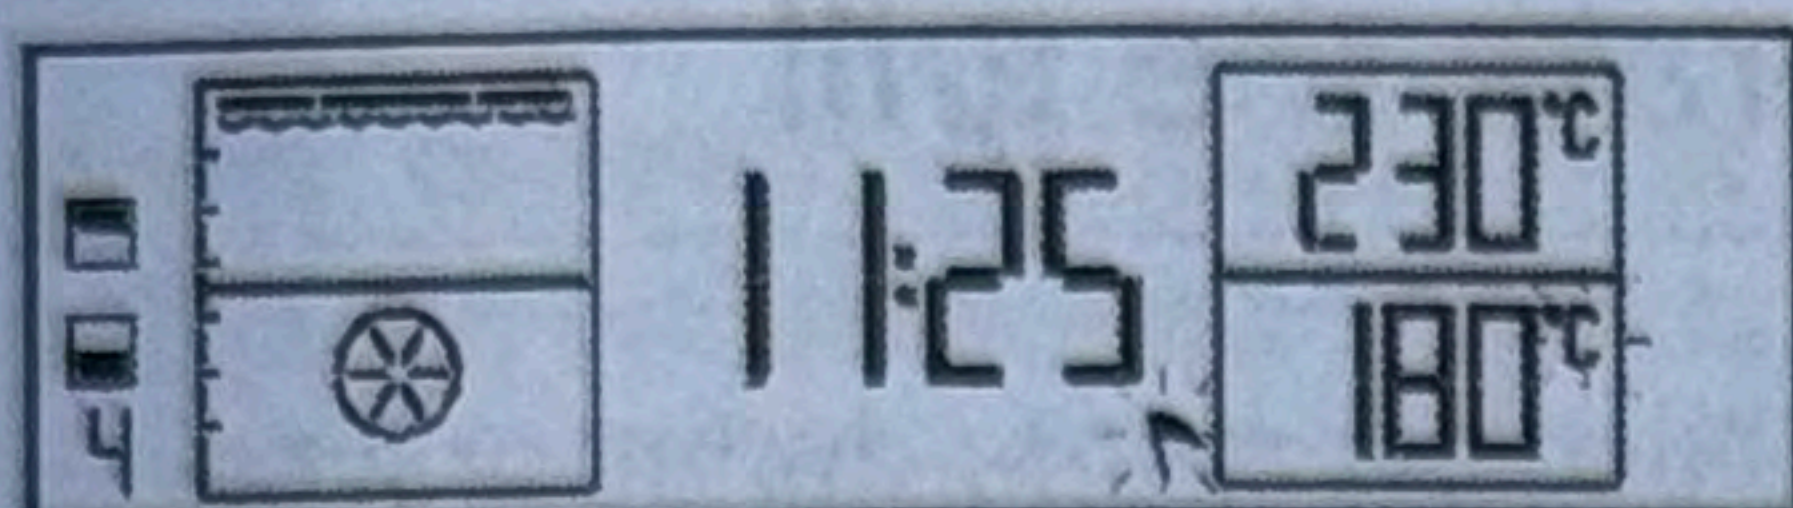
18. At the end of the cooking process, touch key again for two seconds to end cooking..


19. Touch to enter the display for setting the operating function. The relevant function number will flash on the display.


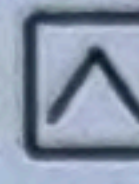
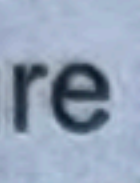

20. Touch to select the appropriate cooking function amongst the ones adjusted for both oven sections. For example, to make grill in the top and cook pastry in the bottom section you can select Grill & Fan supported function.

21. After the function is selected, "Temperature" and "Cooking time" can be adjusted separately for each oven section. For these settings symbol of the active cooking section will flash.


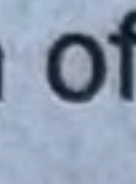
22. If you want to change the temperature of top oven, touch once to access the temperature display of top oven. °C symbol will flash on the temperature display of the selected oven section.

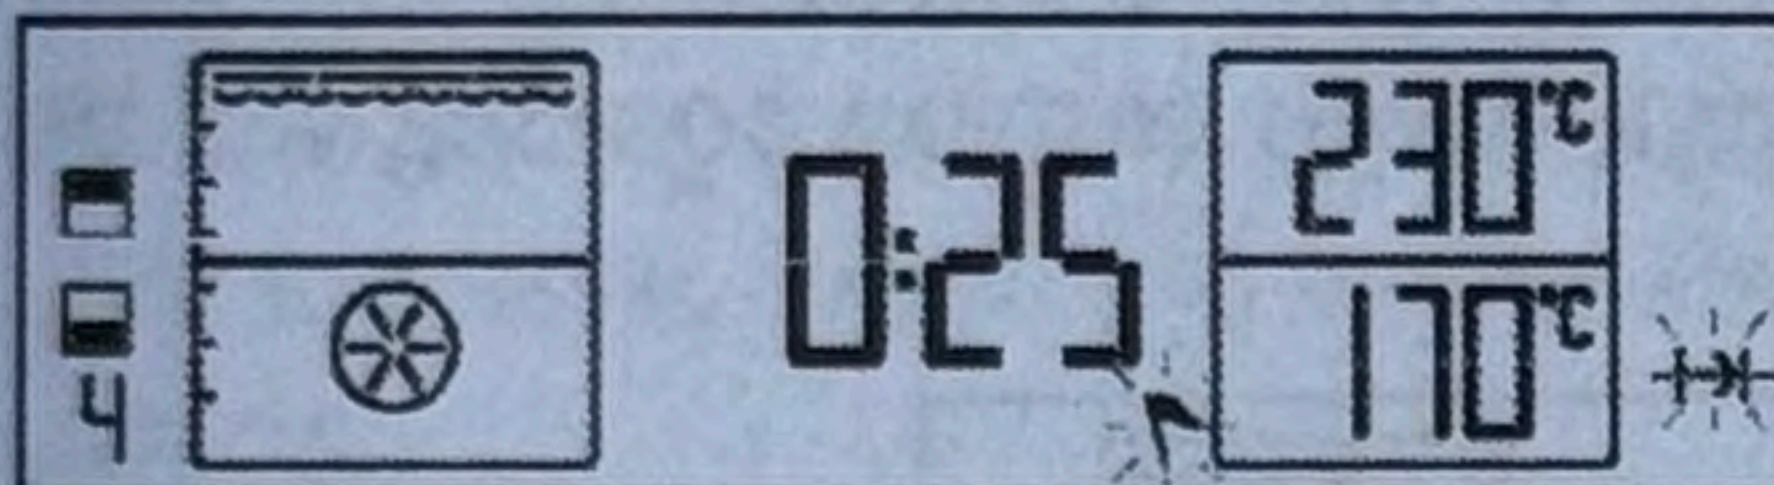



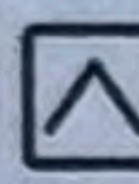
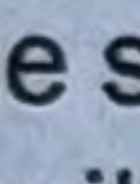
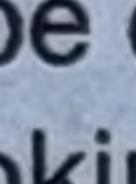
10. Touch  once to access the temperature display of bottom oven. °C symbol will flash on the temperature display of the selected oven section.


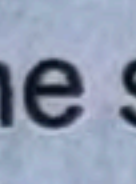
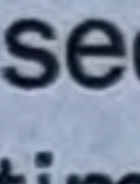
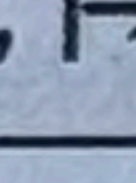
11. Touch   to set the desired temperature. When you reach the desired value, confirm the temperature by touching . °C will lid steadily and  symbol of the active cooking section will flash.

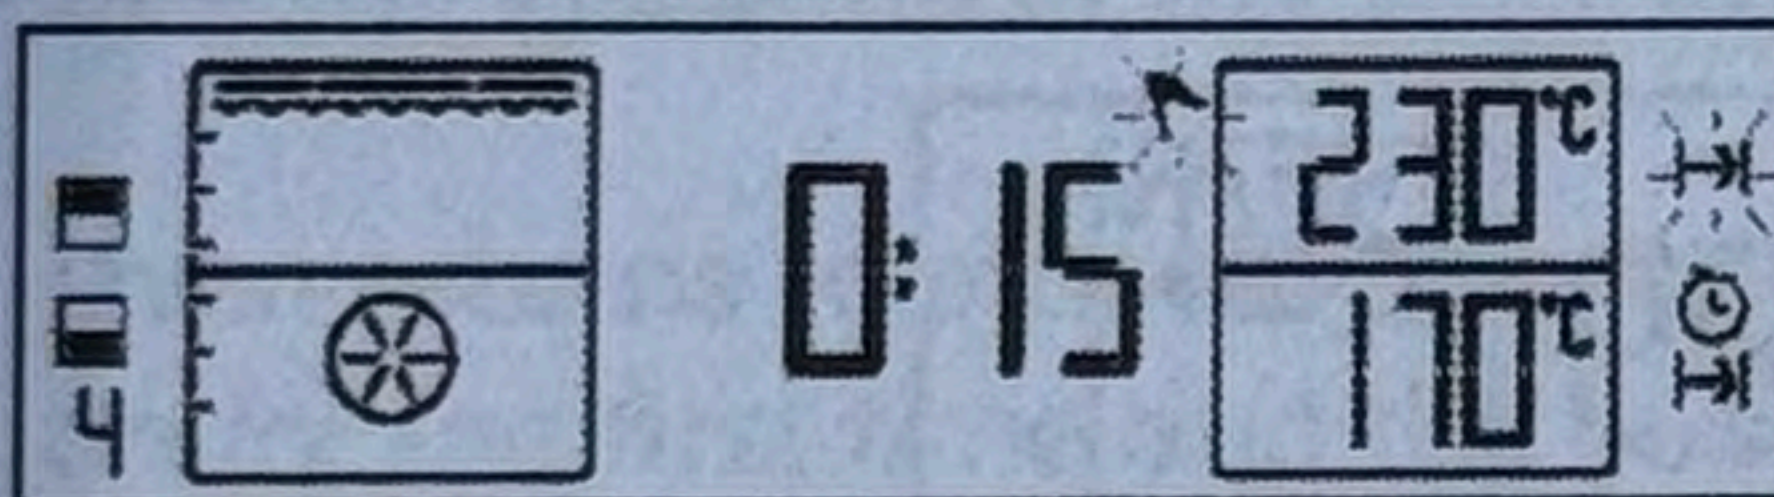
While using the top and bottom sections simultaneously, if you want to change temperature setting, the difference between the sections cannot be more than 80 °C. Because the sections will be affected from each others temperature.

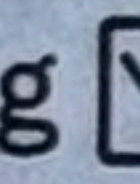

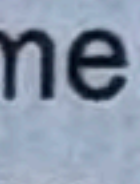
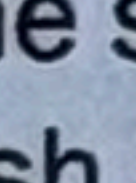
12. Touch  once for the cooking time of the active bottom section of the oven. At the same time,  will flash.



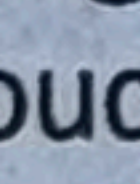
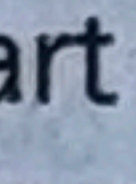
13. Touch   to set the desired cooking time and confirm the setting by touching . Once the time is set,  will be displayed on the screen.

14. For the cooking time of the other top section, first activate the section by touching .  symbol of the top section will flash. Then, touch  once. At the same time,  symbols will flash.



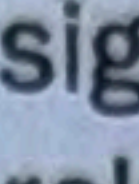
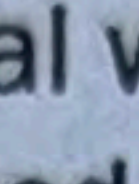
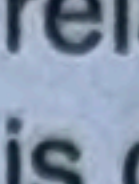
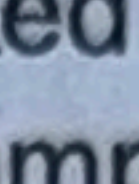
15. Set the desired cooking time for the top section by touching   and confirm with . Once the cooking time of the top section is set,  will be displayed on the screen continuously.

16. Put your dish into the oven and close the door.

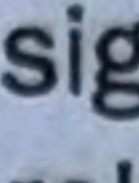
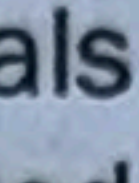
17. If cooking function, temperature and time are suitable, touch  for 2 seconds to start cooking. Cooking will start and  will appear on your display. Your oven will readily start operating in the selected function and will increase the inner temperature to the set temperature. It will maintain this temperature until the end of the set cooking time. Each grade of the inner temperature symbol will be lit as inner temperature reaches to the set temperature. Additional active heaters and recommended tray position appear in the Function display.

All segments of the inner oven temperature symbol will turn on when the oven reaches the set temperature.

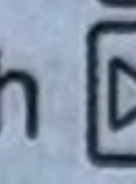
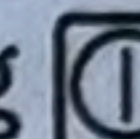
18. At the end of the short cooking time, a single

signal will be heard and  and  symbols of the related oven section will disappear. After the cooking is completed,  and  will flash on the display and an alarm signal will be heard.


19. Take the meal out of the oven when cooking duration is over. When you close the oven door again, cooking in the other section with the longer cooking duration will continue.

20. Once the long cooking duration is complete, two signals will be heard and  and  symbols of the related oven section will flash.

21. Cooking will stop.

22. Touch  for two seconds if you want both sections of the oven to continue operating. The oven will continue cooking for an indefinite period of time. If you want to cancel the semi-automatic programming after you have set it, you need to reset the cooking duration. You can also switch off the oven by touching  for 2 seconds if you want.

Switching off the electric oven


Touch  for 2 seconds to switch off the oven.

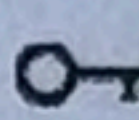
Using the key lock


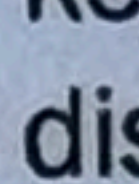
You can prevent oven from being intervened with by activating the key lock function.

Key lock can be used when the oven is in stand-by. The set key lock will be cancelled in case of power failure.

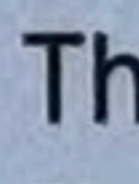
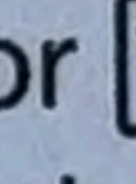
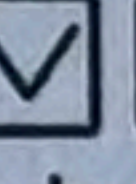
Activating the key lock

1. Touch  key with short intervals until "OFF" appears on the display.

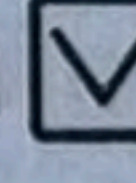
 will flash.

2. Touch  key once to activate the key lock. The key lock will be activated, "On" will appear on the display.  will continue to flash.

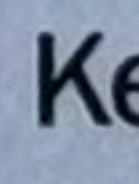
3. Touch OK to confirm the setting.

The text will disappear and  will light continuously. Except for   keys, other oven keys are not functional when the key lock function is activated.

Deactivating the key lock

1. Touch  once to deactivate the key lock. "OFF" will appear on the display.

2. Touch OK to confirm the setting.

Key lock will be deactivated and  on the display will disappear.


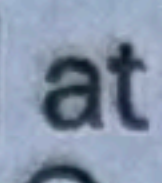

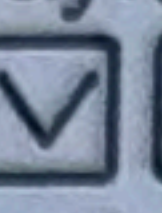

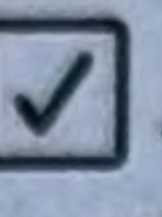

Using the clock as an alarm

You can use the timer of the product for any warning or reminder apart from the cooking program.

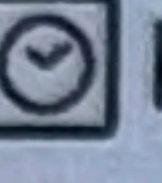
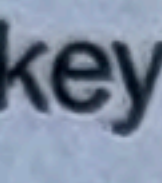
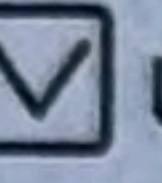
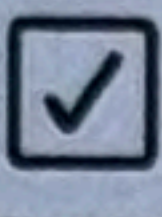

The alarm clock has no influence on the functions of the oven. It is only used as a warning. For

example, this is useful when you want to turn food in the oven at a certain point of time. Alarm clock will give a signal once the time you set is over. Maximum alarm time can be 23 hours and 59 minutes.

To set the alarm:

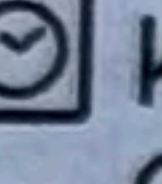
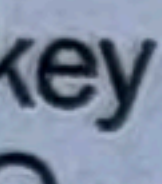
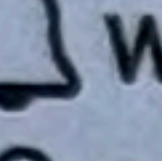
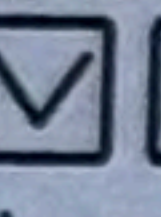
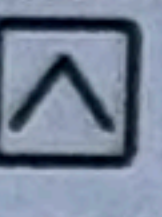
1. Touch  at short intervals until  appears on the display.  will start flashing.
2. Touch   to set the desired time and confirm the setting by touching . Once the alarm time is set,  will be displayed continuously.
3. Alarm will be given after the alarm time has elapsed.
4. You can stop the alarm by touching any key.

To cancel the alarm:

1. Touch  key at short intervals until  appears on the display.
 2. Touch  until "00:00" appears on the display and confirm the setting by touching .
- Alarm will be cancelled and  symbol will disappear.

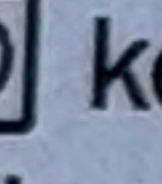
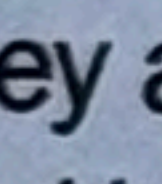
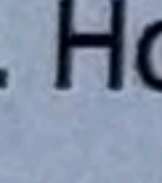
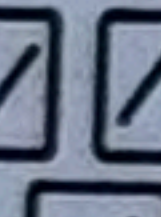
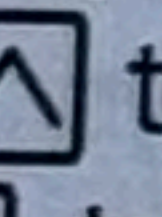
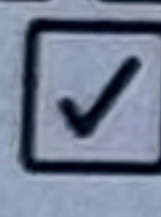
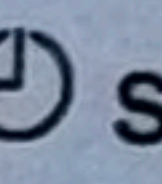

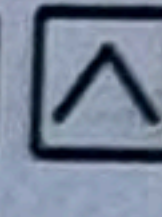
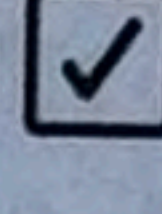
Sound setting

Sound can only be set when the oven is on stand-by display.

1. Touch  key at short intervals until  appears on the display.  will flash on the display.
 2. There are 2 sound types, namely "1" and "2". Touch   to select the desired type.
 3. Touch OK to confirm the setting.
- It returns to the stand-by display. Only the current time appears on the display.


Current time setting

Current time can only be set when the oven is switched off. If you want to change the time that was set during initial setup:

1. Touch  key at short intervals until  appears on the display. Hour field and  will symbol flash on the display.
2. Use   to set the hour field.
3. Touch  to confirm the setting.
4. Minute field and  symbol will flash. Set the minute with   keys. Touch  to confirm the minute.

It returns to the stand-by display. Only the current time appears on the display.

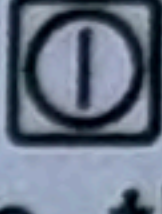
How to operate the grill

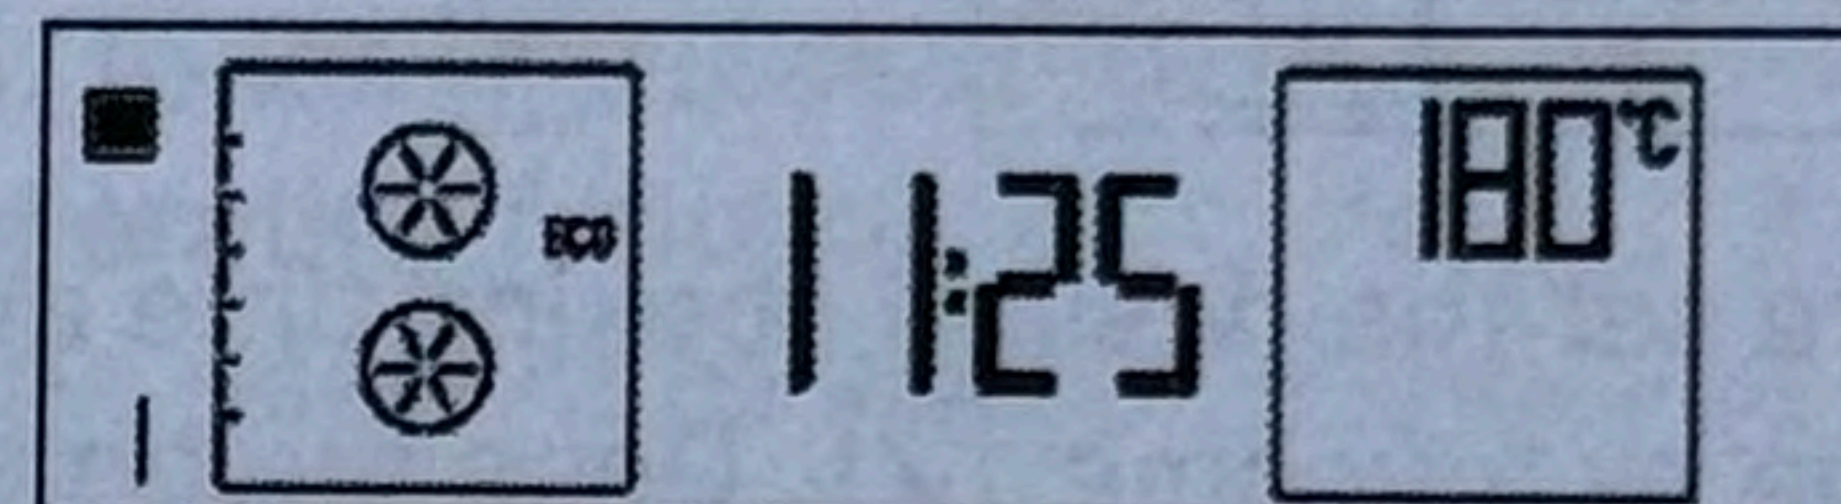
 **WARNING:** Close oven door during grilling. Hot surfaces may cause burns!

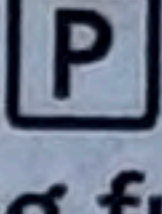
Grilling can be made in single whole section, only top section or in the top section when bottom-top sections are operated.

Grilling in single large section



Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.

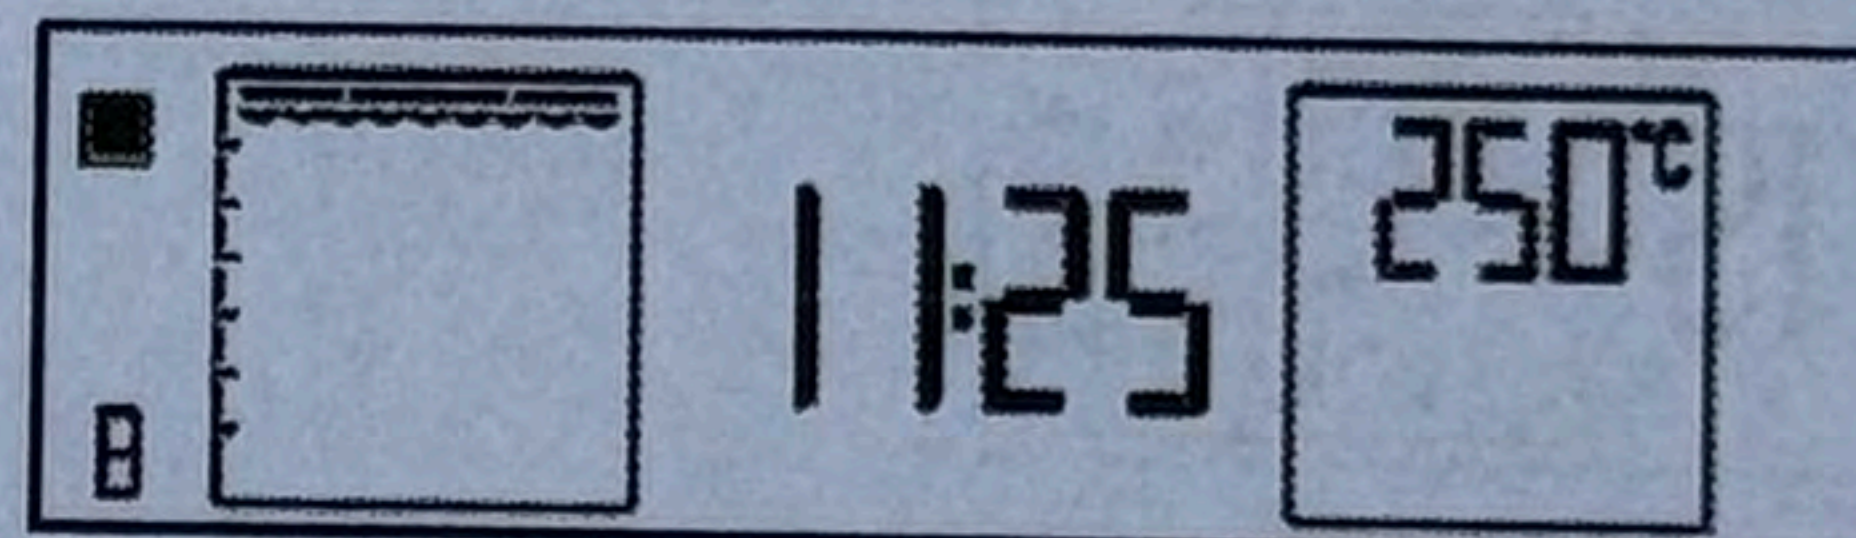
1. Remove the middle section plate from the oven. Only after the middle section plate is removed the oven timer will work in single large section cooking setting.
2. Switch on the oven touching  for two seconds.
3. When the oven is switched on, the first function peculiar to the single large section cooking will be displayed.



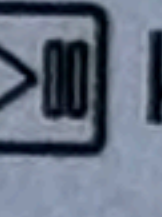
4. Touch  to enter the display for setting the operating function.

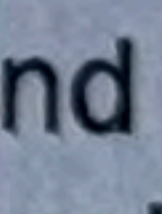
The relevant function number will flash on the display.


5. Touch   to select the desired grill function.



6. After the function is selected "Temperature", "Rapid Heating (Booster)", "Cooking time" and "Cooking end time" can be set. see. (Operating the oven as a single section).

7. If cooking function, temperature and time values are suitable, touch  key to start cooking. Cooking starts.

8. If the cooking time is set, the oven will automatically switch off at the end of this time. Two audible signals will be heard. If no cooking time is set, touch  again to end the cooking when the cooking process is complete.

9. Touch  key to switch off the oven.


Grilling in top section only mode

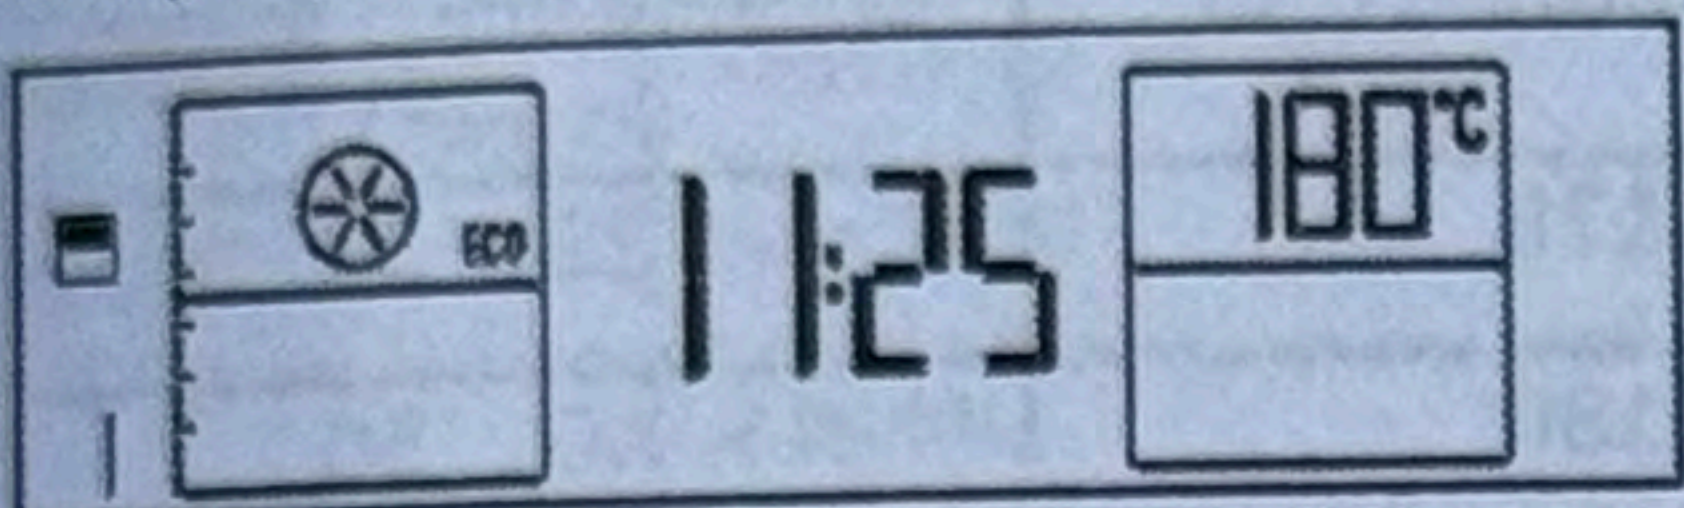
Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.



1. Place the middle section plate in its housing

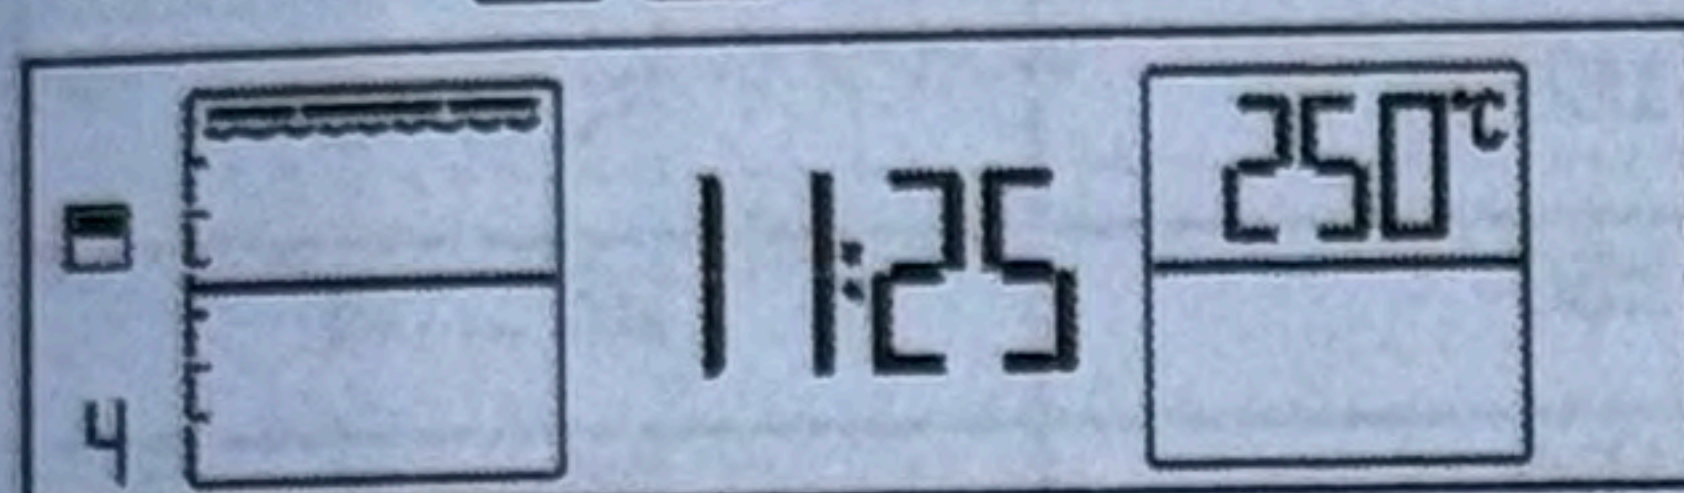
found between the 3rd and 4th rack guides.

⚠ If the middle section plate is not placed, the oven timer will operate as a whole single section.


2. Switch on the oven touching  for two seconds.
3. When the oven is switched on, the first function peculiar to the single large section cooking will be displayed.

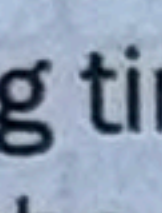


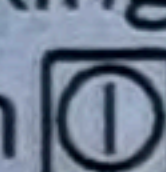
4. Touch   to select the desired grill function.



5. After the function is selected "Temperature", "Rapid Heating (Booster)", "Cooking time" and "Cooking end time" can be set.

6. If cooking function, temperature and time values are suitable, touch  key to start cooking. Cooking starts.

7. The oven will automatically switch off at the end of the cooking time, if set. Two audible signals will be heard. If no cooking time is set, touch  again to end the cooking when the cooking process is complete.


8. Touch  key to switch off the oven.

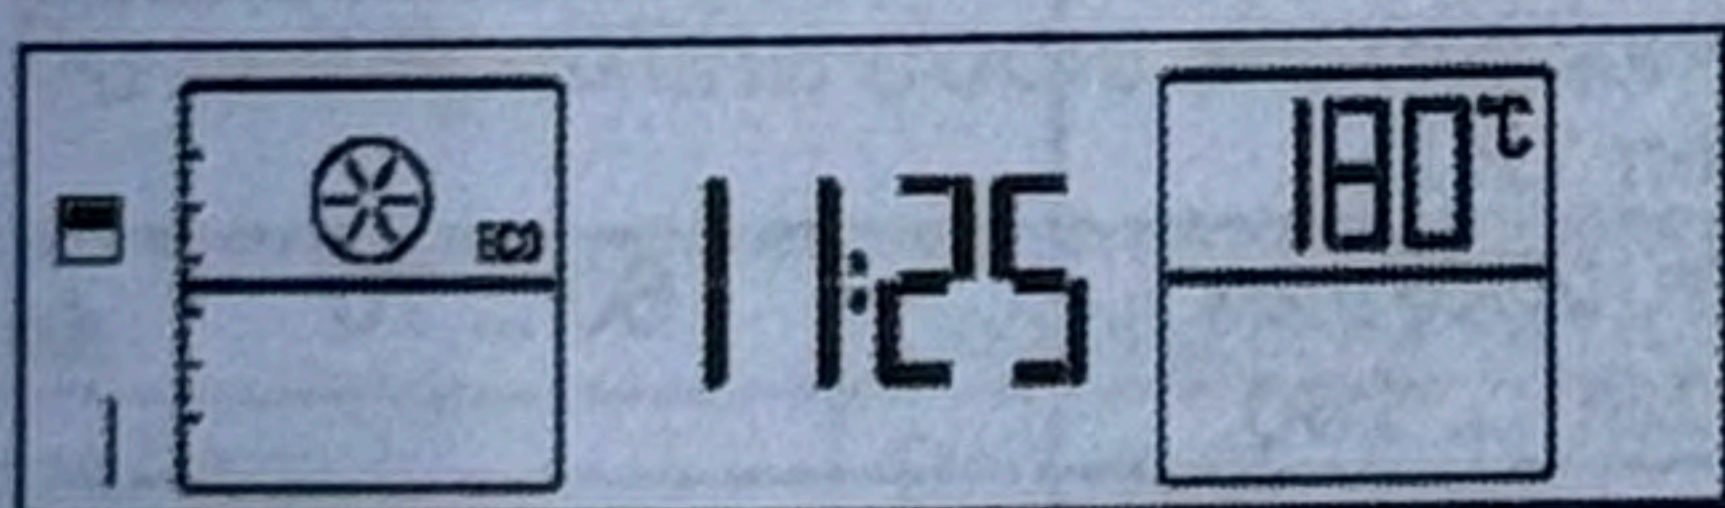
Grilling only in the top section while the top and bottom sections of the oven are in operation


Oven returns to stand-by display after it is powered on for the first time and the current time is set. Only the current time appears on the display.



1. Place the middle section plate in its housing found between the 3rd and 4th rack guides.

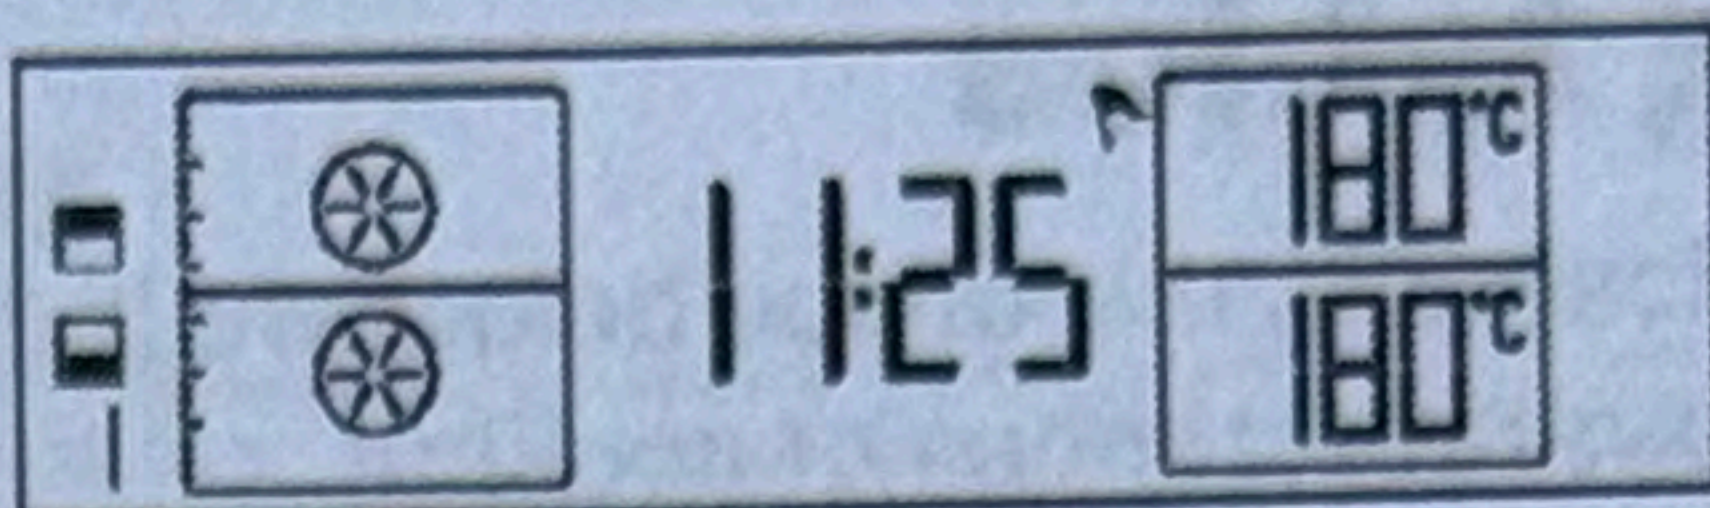
⚠ If the middle section plate is not placed, the oven timer will operate as a whole single section.

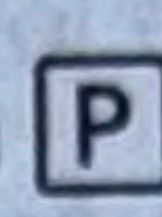
2. Switch on the oven touching  for two seconds.
3. When the oven is switched on, the first function peculiar to the single large section cooking will be displayed.



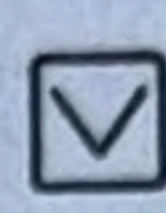
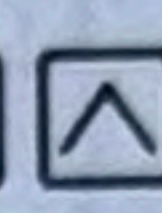
- ⚠ Each time you touch , the bottom section only, both bottom and top sections and the top section only will be activated respectively.

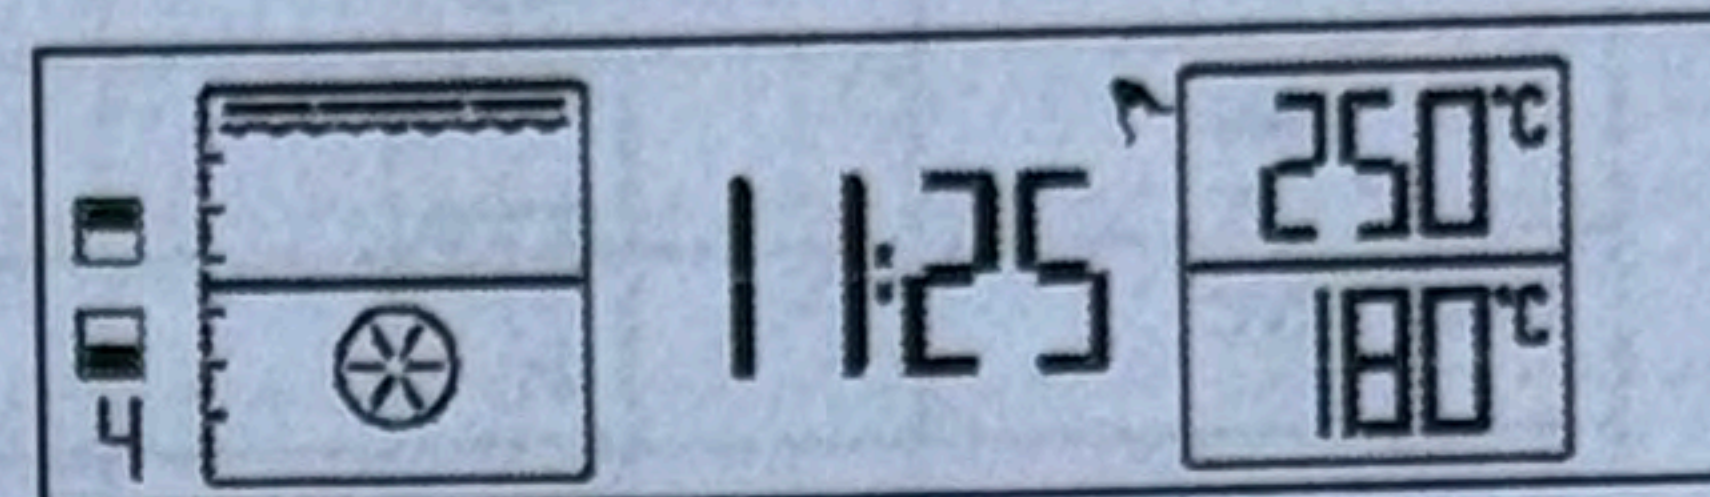
4. Activate both sections by touching  twice.  will appear next to each oven section.




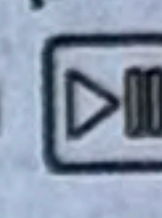
5. Touch  to enter the display for setting the operating function.

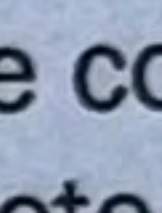
The relevant function number will flash on the display.

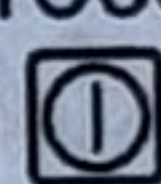
6. Touching   select the desired function pair with the top section is selected as grill function.



7. After the function is selected, "Temperature" and "Cooking time" can be adjusted separately for each oven section. For these settings  symbol of the active cooking section will flash.

8. If cooking function, temperature and time values are suitable, touch  key to start cooking. Cooking starts.

9. The oven will automatically switch off at the end of the cooking time, if set. Two audible signals will be heard. If no cooking time is set, touch  again to end the cooking when the cooking process is complete.

10. Touch  key to switch off the oven.

⚠ WARNING: Foods that are not suitable for grilling carry the risk of fire. Only grill food which is suitable for intensive grilling heat. Do not place the food too far in the back of the grill. This is the hottest area and fatty food may catch fire.